



QUALITY CLEANING SOLUTIONS



**IDEAL FOR:**

- Community Centres
- Gymnasiums & Schools
- Warehouses
- Airports

**60L WET & DRY VACUUM  
WITH OUTRIGGER**

**2300W TWIN MOTORS**

**WD60LSSO**



## IMPORTANT

Always switch off the cleaner and remove the plug from the mains power supply before cleaning your appliance, when not in use or attempting any maintenance task. The cleaner must only be connected to an AC power supply at the voltage shown on the rating label. This cleaner should only be used for its intended purpose as described in this instruction manual.

## SAFETY PRECAUTIONS AND WARNING:

### WHEN USING YOUR VACUUM CLEANER, BASIC PRECAUTIONS SHOULD ALWAYS BE OBSERVED, INCLUDING THE FOLLOWINGS;

1. This appliance is **not** intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
2. Children should be supervised to ensure that they do not play with the appliance.
3. To prevent electrical shock, do not immerse the appliance, power cord or power plug into water or other liquids.
4. To prevent electrical shock, do not use the vacuum cleaner outdoors.
5. Always check the power cord before use, the power cord and the plug should be in a good condition and must not be damaged. If the power supply cord is damaged or defective, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
6. **Do not** unplug by pulling on the power cord. To unplug, grasp the plug not the power cord. Use only Australian and New Zealand electrical safety approved extension cords.
7. **Do not** pull or carry the appliance by the power cable, use the power cable as a handle or pull the power cable around shaft edges or corners. Avoid running the appliance over the power cable.
8. Ensure the appliance is switched off before unplugging.
9. **Do not** handle or operate the appliance with wet hands and follow electrical safety precautions at all times.
10. Extreme caution should be exercised when using the appliance on stairs.
11. **Do not** attempt to change the attachments while the appliance is plugged in to mains power supply. Switch off and remove plug from mains power supply. Use only manufacturer's recommended accessories.
12. **Do not** operate the vacuum cleaner too close to the heaters, radiators and other hot surfaces.
13. **Do not** use the appliance to pick up flammable items or combustible liquids (i.e. petrol, hot ashes cigarettes, matches, explosive materials or anything burning) or use in areas where such substances and items may be present.
14. **Do not** use the appliance to pick up toxic materials (i.e. chlorine bleach, ammonia).
15. Ensure the appliance is disconnected from the main power supply before connecting the hose to the unit.
16. **Do not** operate or use the appliance without dust bag and/or filters in place while dry vacuum cleaning.
17. Before vacuuming, remove any large or shaft objects from the floor or cleaning surface in order to prevent damage to the filter.

18. If the air inlet, floor head or the telescopic tube is blocked, switch off the cleaner straight away and remove from the main power. First clear the blocked object before attempting to start the cleaner vacuum again.
19. **Do not** leave the appliance unattended when it is connected to a mains power socket.
20. Before carry out any maintenance service or cleaning the filters, always switch off the vacuum cleaner and disconnect the plug from power supply.
21. Keep ends of the hose, telescopic tube and other openings away from your face and body.
22. **Do not** use the vacuum cleaner if it is damaged or breaks down. Check the electrical regularly for defects. If connection cables, electrical hoses, electrical contacts and electric tubes are damaged, have them replace immediately.
23. **Never** clean the vacuum cleaner or any of the electrical parts, especially the electrical connections with water or liquid cleaners.
24. **Never** attempt to make any modifications electrically to the vacuum cleaner.
25. Always store the appliance indoors in a cool and dry place.
26. Damage caused by improper use or by **not** observing the instructions in this manual will void warranty.

## BEFORE YOU BEGIN



1. **Do not** operate the vacuum cleaner too close to heaters, radiators, and other hot surfaces.



2. Before inserting the plug into the wall, make sure your hand is dry.



3. Before turning on the vacuum cleaner, remove any large or sharp objects from the floor or cleaning surface in order to prevent damage to the filter.



4. When you want to pull the plug from the wall, **do not** use the power cable, gently pull the plug from the power socket.
5. If the hose inlet or chrome tube are blocked, you should switch off the cleaner straight away and remove from mains power. First clear the blocked substance before attempting to start the vacuum cleaner again.

This machine is equipped with a cable restraint, cord and plug. In the event that either of these parts get damaged, it must be repaired by a qualified technician.

## KNOW YOUR PRODUCT

1. Handrail (telescopic)
2. Handle
3. On/Off Switch
4. Trolley
5. Connection Latches
6. Hose Inlet
7. Tank
8. Rear Wheel
9. Drain Pipe
10. Small Castor Wheel
11. Outrigger Attachment
12. Combination Floor Tool
13. Wet Floor Tool
14. Crevice Tool
15. Dusting Brush
16. Hose Assembly
17. Extension Cable (10m)
18. 2 Piece Chrome Tube
19. HEPA Filter
20. Reusable Cloth Filter Bag



### Technical Information

Model: WD60LSSO

220-240V ~ 50HZ

2300W MAX

2000W NOM

Noise Level: 82dBa



# ASSEMBLY

1. Disconnect latches on side of machine and remove the canister lid. Remove all accessories from inside the tank. Replace the canister lid (with the power cord facing the opposite direction of the hose inlet) and connect the latches.

- |           |            |
|-----------|------------|
| a. Pin    | e. Trolley |
| b. Washer | f. Washer  |
| c. Wheel  | g. Clamp   |
| d. Washer |            |





## ASSEMBLY (CONTINUED)

### Rear Wheels

1. Assemble the rear wheels in accordance with the diagram above. Follow steps “a” through to “g”.

### Small Castor Wheels

1. Insert small castor wheels into the holes located at the base of the trolley frame.
2. Assemble gasket and lock nut accordingly (use of a spanner is required).

 
### Handrail

1. Insert handrail into the frame of the trolley.
2. Assemble bolt and screw star grip knob (M8) according.
3. The handrail is telescopic and can be adjusted in accordance with user height. There are 3 different height options.
  - Choose the handrail height required.
  - Push down on the locking pins on the handrail (both left and right sides) and slide the handrail up or down.
  - Ensure locking pins are engaged into the locking holes on each side of the handrail.
4. For storage, the handrail can also be folded down over the lid of the cleaner.


## ASSEMBLY (CONTINUED)

### Outrigger


The Outrigger component should already be assembled when removed from the packaging box.

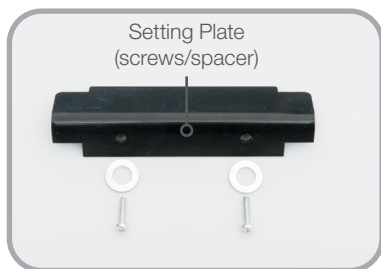

 1. Put the outrigger assembly into the grove at the bottom frame on the trolley.

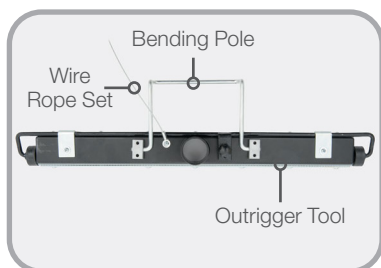

 2. Put the setting plate over the bending pole and secure with screw and spacer provided.

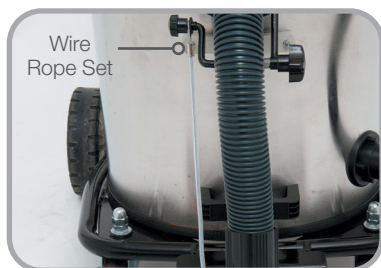

3. Place the wire rope set onto the bending axle on the machine. Secure with star grip knob (M6).




## ASSEMBLY (CONTINUED)
 
### Assembling the Hose and other Floor Tools

Please follow the below instructions if using this machine with the hose assembly and other floor tools.

1. Connect the 2-piece metal tube together.

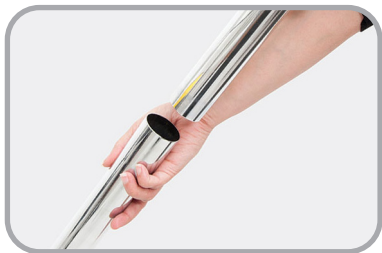

2. Connect the handle on the hose to the tube.



3. Connect the tube to the combination floor tool or wet pick up floor tool.



4. Insert the hose connector into the hose inlet on the machine.





## ASSEMBLY (CONTINUED)

### Cable Restraint

**IMPORTANT – ENSURE EXTENSION CORD IS FITTED TO THE RESTRAINT CORRECTLY AND THAT THE RESTRAINT IS FITTED TO THE TROLLEY PROPERLY.**



1. Connect extension cord to the cable on the machine. Make a loop at 40cm on the extension cord.



2. Feed loop up through cable restraint opening.



 
3. Place extension cord over top of hook. Pull down on cord to lock on hook.



4. Pull down on the extension cord firmly to ensure it does not slip.

**IMPORTANT! When turning the On/Off Switches please do so one at a time. Both switches are protected with a water-proof cover. If the waterproof cover has been broken, please contact your nearest Pullman agent for repair/service.**

## ACCESSORIES

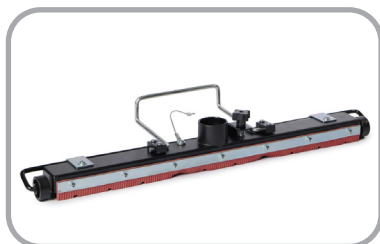

Outrigger Assembly

### Outrigger

The Outrigger Tool is ideal for use on hard floors (i.e. concrete, laminate, tiles, timber, marble etc.). This tool can be used for both wet & dry pick up.



Carpet



Hard Floors

The combination floor tool is ideal for cleaning on carpets and hard floors.



Crevice Tool



Dusting Brush

### Fitting the dusting brush and crevice tool

To fit the accessories to the tube, gently insert the tube into the top of the dusting brush or crevice tool.

**Dusting Brush** – ideal for cleaning furniture, curtains and upholstery

**Crevice Tool** – ideal for cleaning in tight spaces



### Wet Brush Head

The Vacuum Wet Brush Head is designed for efficient cleaning on wet surfaces. Whether you're tackling spills or performing a routine clean, this versatile tool ensures a thorough clean every time.

## OPERATION



### Dry Vacuum Cleaning

1. Ensure the HEPA filter and cloth bag is always fitted before the cleaner is used.
2. Once the tank is full we recommend the tank to be emptied and cleaned out.
3. The cloth bag also needs to be cleaned accordingly.

### Wet Vacuum Cleaning

 
1. Ensure the HEPA filter is fitted and the cloth bag is removed before the cleaner is used.
2. Unplug the cleaner from the mains power supply, empty the tank by using the drainpipe. Avoid leaving dust or dirty water in the tank.
3. Wipe the machine inside and out from time to time, using only luke warm water. Before use always examine the power cable for cuts and/or damage.
4. Wet pick up accessories should be washed periodically.

## MAINTENANCE

**ATTENTION: DISCONNECT FROM MAINS POWER SUPPLY BEFORE DOING ANY MAINTENANCE WORK. IF PROPER CARE IS TAKEN TO MAINTAIN YOUR CLEANER, MOTOR MAINTENANCE IS UNNECESSARY. HOWEVER WE RECOMMEND THAT YOUR CLEANER IS SERVICED ONCE A YEAR.**




1. Release the locking latches to remove the canister lid.

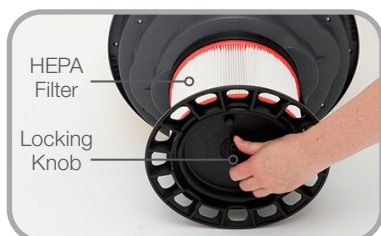

2. Unlock the locking knob and remove the HEPA filter.



 3. Remove the cloth bag.

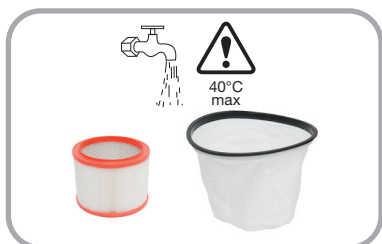

4. Wash and clean the HEPA filter and bag carefully using luke warm water.

## MAINTENANCE (CONTINUED)

**IF PROPER CARE IS TAKEN TO MAINTAIN YOUR CLEANER, MOTOR MAINTENANCE IS UNNECESSARY. HOWEVER WE RECOMMEND THAT YOUR CLEANER IS SERVICED ONCE A YEAR.**



5. Dry by airing for at least 24 hours.



6. Re-fit the HEPA filter and cloth bag into the machine.

## MAINTENANCE (CONTINUED)

### Cleaning the Tank



1. Release the locking clip to unlock the barrel from the base.



2. Remove the cloth bag and clean thoroughly.



3. Empty the tank and clean the inside of it thoroughly, use luke warm water only.
4. Use the drainpipe to drain water out of the tank.

# TROUBLESHOOTING

TROUBLE	POSSIBLE CAUSE	REMEDY
Suction weakens or cleaner runs hot	Clogged filter	Brush dirt from filter. If condition continues, change filter.
	Air leak	Check all fittings for tight fit (floor tool, hoses, etc.). Check that tank cover is sealed properly.
	Obstruction in hose or floor tool	Check floor tool, hose, etc. for obstructions, and remove if present.
Misting in the exhaust air	Saturated filter	Remove saturated filter and the filter mesh.

# CUSTOMER CARE

Please contact Godfreys Commercial Customer Support on 131 929 to find your local spare parts provider.

PRODUCT NUMBER	PRODUCT DESCRIPTION
31110223	Combination Floor Tool 40mm
31110225	Wet Floor Tool with Squeegee 40mm
31151793	Outrigger Tool Complete
31110226	Hard Floor Tool 40mm (Optional)
33151805	Stainless Steel Tank 60L
33500399	Small Castor Wheels
33500398	Rear Wheels
31151794	Squeegee Replacement
31151797	Handle Assembly 60L
33200874	10m cord
31220455	Hose Assembly 40mm
31300563	2-Piece Chrome Tube 40mm
31130091	Dusting Brush 40mm
31120106	Crevice Tool 40mm
32200829	HEPA Filter
32440319	Cloth Filter Bag
33151779	Pipe, drain assembly



Your Pullman cleaner, in the case of domestic use, has a one year warranty against product defects and failures when the product is used in accordance with the terms and conditions of this warranty statement.

This warranty is provided by Future Innovation Holdings Pty Ltd Trading as Godfreys Commercial ABN 98 677 632 021. This warranty commences from the original date of purchase and is not transferable. You are required to retain your original proof of purchase for any claims under this warranty. This warranty is valid only in the country where the cleaner is purchased.

Your Pullman cleaner must be operated in accordance with these instructions and used only for domestic household cleaning to remove dry dirt and dust from household carpets, flooring and fabrics. Your Pullman cleaner is not fit to be used as an industrial cleaner, and is not designed for the collection of vitreous building material including particle board, construction products and similar products such as wood/ fibres, cement, fillers, fibre glass etc or excessive or frequent sand. The infrequent pick-up of these materials may be harmful to your cleaner and will void this warranty.

Accessories and consumables including dust bags and filters, unless defective in manufacture, are not subject to this warranty. In order to prolong the life of accessories and consumables, regular care and maintenance is recommended.

Refer to the instruction manual for further regarding the use and care of your Pullman cleaner, as misuse or failure to follow the instructions voids this warranty.

In the event of service or advice being needed, or if you would like to make a claim under this warranty, please immediately stop using the Pullman cleaner and contact Godfreys Commercial, 2 Drake Boulevard Altona, VIC 3018 on 131 929, Monday-Friday 9am-5pm AEST or [commercialsupport@godfreys.com.au](mailto:commercialsupport@godfreys.com.au).

The decision to repair or replace the cleaner is at the discretion of Godfreys Commercial depending on the circumstances and requirements of any applicable law. If Godfreys Commercial decide to repair or replace your Pullman cleaner, it will do so at its own cost. Any transportation costs involved in a claim under this warranty shall be borne by the claimant.

Godfreys Commercial is unable to accept responsibility under this warranty for any repair work not carried out by an authorised Service Agent, or any defect arising from or in connection with the use of non-genuine parts. If any part is no longer available or manufactured, Godfreys Commercial will replace it with a genuine functional replacement part. This warranty does not apply to the cost of replacing any parts of the Pullman cleaner due to normal wear and tear, alterations, improper installation, physical abuse, misuse or accidental damage.

If proof of purchase cannot be provided at the time of a warranty claim or service, any work carried out on the Pullman cleaner will be at claimant's cost.

The repair of the Pullman cleaner under this warranty does not extend the original period of warranty. If your Pullman cleaner is replaced under this warranty, the replacement will be covered by this warranty for the remainder of the original warranty period. However, you may still have statutory rights after this time.

The benefits conferred by this warranty are in addition to all other rights and remedies in respect of the product as outlined under the Competition and Consumer Act 2010 (Cth) and other State and Territory laws.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.



**Future Innovation Holdings Pty. Ltd. trading as Godfreys Commercial**

ABN: 98 677 632 021

2 Drake Boulevard Altona, Victoria 3018

**Customer Support:**

131 929

[www.godfreyscommercial.com.au](http://www.godfreyscommercial.com.au)

[commercialsupport@godfreys.com.au](mailto:commercialsupport@godfreys.com.au)

Pullman® is a registered trademark.