

S

sauber

SMART ROLLZ

SR-601



Accessories

12



13



14





SR-601

Congratulations on the purchase of your new Sauber Smart Rollz Hard Floors cleaner. There are many useful features built into your cleaner and we recommend that you carefully read this instruction manual so that you may take best advantage of them.

1. On/Off Button
2. Indicator Light
3. Water Spray Button
4. Pre-installed Lithium Battery
5. Clean Water Tank
6. Charging Port
7. Floor Head Cover Release Button
8. Floor Head Cover
9. Dirty Water Tank
10. Front Brush Roller & Rear Brush Roller
11. Brush Roller Release Button

Accessories:

12. Cleaning Tool
13. Charger
14. Machine Base

Specifications:

Rated Voltage: 14.4VDC

Rated Input Power: 60W

Adapter Input: 100-240V ~50-60Hz

Adapter Output: 17.4VDC 600mA

Floor Brush Motors: 25W x 2

Water Spray Pump Power: 5W

Battery Capacity: 2000mAh

Charging Time: 4-5h

Clean Water Tank Capacity: 350ml

Dirty Water Tank Capacity: 180ml

Net Weight: 3.7Kg

Gross Weight: 4.7Kg

Please contact Sauber Customer Service on 131 929 to find your local spare parts provider.



Before You Begin

This cleaner must be operated in accordance with these instructions and used only for domestic household cleaning. This cleaner is not fit to be used as an industrial cleaner and will void the manufacturer's warranty if used inappropriately.

Please read these instructions thoroughly

This will ensure you obtain full benefit from your new cleaner. Keep this Instruction Manual in a convenient and safe place for future reference.

Important

Always switch the machine off and remove the plug from the electricity supply before cleaning your appliance, when not in use, or attempting any maintenance task. This cleaner should only be used for its intended purpose as described in these instructions.

Precautionary measures:



1. Do not operate the hard floor washer too close to heaters, radiators or other hot surfaces.



2. Before inserting the charger into the wall, make sure your hands are dry



3. Before turning on the hard floor washer, safely remove any large objects from the floor or cleaning surface in order to prevent damage to the filter.



4. When you want to remove the charger from the power socket, do not use the power cable, gently pull the plug from the power socket.

5. Do not operate the hard floor cleaner on carpets.



Safety Precautions & Warnings



IMPORTANT! Always switch Off the cleaner before cleaning your appliance, when not in use or attempting any maintenance task. The provided charging adaptor must only be connected to an AC power supply at the voltage shown on the rating label. This vacuum should only be used for its intended purpose as described in this instruction manual.

Never operate the cleaner without Dirty Water Tank.

When using you cleaner, basic precautions should always be observed, including the following;

1. This appliance is not intended for use by persons (including children) with reduced physical, sensory, mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
2. Children should be supervised to ensure that they do not play with the appliance.
3. To prevent electrical shock, do not immerse the appliance, battery or power plug into water or other liquids.
4. To prevent electrical shock, do not use the hard floor cleaner outdoors .
5. Always check the power cord before use, the power cord and the power adapter should be in a good condition and must not be damaged. If the power cord or the charger adaptor is damaged or defective, it must be replaced.
6. The appliance and charger are intended for domestic indoors use only.
7. Do not unplug the charger by pulling on the power cord. To unplug, grasp the power adapter, not the power cord and gently pull the power adapter from the power socket.
8. Do not handle or operate the appliance with wet hands. Follow electrical safety precautions at all times.
9. Do not attempt to change the attachments while the appliance is switched on. Use only manufacturer's recommended accessories.
10. Do not operate the hard floor hard floor washer too close to heaters, radiators and other hot surfaces.
11. Do not use the appliance to pick up flammable items or combustible liquids (i.e. gasoline, hot ashes, cigarettes, matches, explosive materials or anything burning) or use in areas where such substances and items may be present.
12. Do not use the appliance to pick up toxic materials (i.e. chlorine, bleach, ammonia).
13. Never operate or use the appliance without the filters in place.
14. Before using the hard floor cleaner, remove any large or sharp objects from the floor or cleaning surface in order to prevent damage to the filter.
15. If the air inlet or floor head is blocked, switch off the cleaner straight away. Clear the blocked object before attempting to start the hard floor cleaner again.
16. Before carrying out any maintenance or cleaning



- the filters, always switch off the hard floor cleaner.
17. Keep openings away from your face and body.
 18. Do not use the hard floor cleaner if it is damaged or broken. If connection cables are damaged, have them replaced immediately.
 19. Never clean the hard floor cleaner or any of the electrical parts, especially the electrical connections with water or liquid cleaners.
 20. Never attempt to make any modifications to the hard floor cleaner and charger.
 21. Always store the appliance and charger indoors in a cool and dry place.
 22. This cleaner is for dry household use only.
 23. Never run over the power cable with the power head, as this may cause damage to the power cable.
 24. Keep your hands away from the roller brush while the hard floor cleaner is switched on.
 25. To prevent unnecessary wear on the roller brush, keep it moving while in operation.
 26. Damage caused by improper use or by not observing the instructions in this manual will void the warranty
- from the battery; avoid contact. If contact occurs, flush with water immediately. If liquid comes into contact with your eyes, seek medical help immediately.
5. Do not charge or store the appliance outdoors or inside the car. Only charge or store the battery in a dry indoor area where the temperature is more than 4°C but less than 40°C. The charger is for indoor use only.
 6. The charger is not a serviceable part.
 7. The cleaner contains a Li-Ion battery. Do not dispose the appliance with your local garbage. Contact your local council for instructions on how to safely dispose of.
 8. Do not use the charger to charge a non-chargeable battery.
 9. This appliance contains battery cells that are non-replaceable.

Battery use and care

1. The appliance is only to be used with the charger provided with the appliance.
2. Only use the specifically designated charger to charge the product.
3. When the appliance is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects that can make a connection from one terminal to another. Shorting the appliance terminals together may cause burns or a fire.
4. Under abusive conditions, liquid may be ejected



Assembly



IMPORTANT! Always switch off the wall outlet, cleaner and remove the plug from the electricity power supply before fitting or removing accessories!

LIVE PARTS within the charger adaptor.



Connecting the machine

1. Align the metal nozzle on the handle with the connecting rod on the main body. Insert it fully until it stops.

When assembling, the wire needs to be put into the slot and then inserted



2. Place the machine back on the base after use to avoid water mark on your floor.



Assembly



Charging the unit

1. Make sure the machine is fully charged before use.



Indicator light

1. **Low Battery Alert**

When the battery level drops below 20% during use, the indicator light will **turn red** to remind you to charge the machine.

2. **Charging Status**

A **red** indicator light means the machine is currently charging.
When the light turns **green**, charging is complete.

Instructions For Use



Refill clean water tank

1. Simply hold the upper part of the water tank and pull it out to remove.
2. Fill the clean water tank to the MAX line
3. Insert the clean water tank lid into the socket, then push the water tank firmly back into the machine until it clicks into place.

Do not add detergent or solutions to this product, as they may damage internal components and affect performance.



On/Off button

Operating the machine

1. After removing the machine from the base, press the On/Off button on the handle to start or stop the machine.
2. Press and hold the water spray button to spray water onto the front roller brush. The front roller wets and wipes the floor, while the rear roller dries and wipes. Release the button to stop spraying.



Press and hold for water spray



Maintenance



IMPORTANT! Always switch off the wall outlet, cleaner and remove the plug from the electricity power supply before fitting or removing accessories!

LIVE PARTS within the charging adaptor.



Clean dirty water tank

1. Press both lid release buttons simultaneously and lift the lid upwards to open.
2. Lift the handle of the dirty water tank to remove it for cleaning.
3. After cleaning, insert the dirty water tank back into the floor brush slot. Close the floor brush cover and press both sides simultaneously. When you hear a “click” and the buttons on both sides pop out, the cover is securely locked in place.





Safety Precautions:

1. Keep hair, hands and feet away from rotating brush while the motorised brush is running.
2. Do not run the motorised brush over electric cables or string.
3. Do not use the motorised brush on pets.
4. If children are present, make sure to turn the cleaner off when leaving the motorised brush unit unattended.
5. Do not attempt to service or unclog the motorised brush while the cleaner is running.
6. The motorised brush will operate when the cleaner is turned on.



Clean roller brush

1. Press both lid release buttons simultaneously and lift the lid upwards to open.
2. Squeeze the side buttons of the brush rollers to release and remove them.
3. Pull out the brush rollers and insert the new ones securely into place.





Troubleshooting

Problems and Solutions

Please contact Godfreys Commercial Customer Support on 131 929 to find your local spare parts provider.

Fault	Cause	Solution
Rolling brush does not rotate	Flat battery	Charge the floor washer
	The roller brush is pressed by an obstruction or involves too much hair	Remove heavy objects and clean up hair
No water from the pump	The water in the clean water tank has been used up	Refill the clean water tank
	It is blocked by foreign body	Remove the brush roller cover, the dirt on the nozzle and clean the sewage tank
Insufficient use time after charging	Insufficient charging time	The battery is a consumable product. Contact the manufacturer for a new battery replacement.
	Battery age	



Spare Parts

Part	Part Number
Clean water tank assy	33158667
Dirt water tank assy	33158668
Bursh roller kit	33788304
Bursh roller cover	33158669
Charger adaptor	33202456



Notes





2 Years Warranty*

Sauber Smart Rollz



Your Sauber Smart Rollz, in the case of domestic use, has a two years warranty against product defects and failures when the product is used in accordance with the terms and conditions of this warranty statement.

This warranty is provided by Future Innovation Holdings Pty Ltd Trading as Godfreys Commercial ABN 98 677 632 021. This warranty commences from the original date of purchase and is not transferable. You are required to retain your original proof of purchase for any claims under this warranty. This warranty is valid only in the country where the cleaner is purchased.

Your Sauber Smart Rollz must be operated in accordance with these instructions and used only for domestic household cleaning to remove dry dirt and dust from household hard floors. Your Sauber Smart Rollz is not fit to be used as an industrial cleaner or a vacuum cleaner, and is not designed for the collection of vitreous building material including particle board, construction products and similar products such as wood/ fibres, cement, fillers, fibre glass etc or excessive or frequent sand. The infrequent pick-up of these materials may be harmful to your cleaner and will void this warranty.

Accessories and consumables including rollers, dirty water tanks, unless defective in manufacture, are not subject to this warranty. In order to prolong the life of accessories and consumables, regular care and maintenance is recommended.

Refer to the instruction manual for further regarding the use and care of your Sauber Smart Rollz, as misuse or failure to follow the instructions voids this warranty.

In the event of service or advice being needed, or if you would like to make a claim under this warranty, please immediately stop using the Sauber Smart Rollz and contact Godfreys Commercial, 2 Drake Boulevard Altona, VIC 3018, or on 131 929, Monday-Friday 9am-5pm AEST or commercialsupport@godfreys.com.au.

The decision to repair or replace the cleaner is at the

discretion of Godfreys Commercial depending on the circumstances and requirements of any applicable law. If Godfreys Commercial decide to repair or replace your Sauber Smart Rollz, it will do so at its own cost. Any transportation costs involved in a claim under this warranty shall be borne by the claimant.

Godfreys Commercial is unable to accept responsibility under this warranty for any repair work not carried out by an authorised Service Agent, or any defect arising from or in connection with the use of non-genuine parts. If any part is no longer available or manufactured, Godfreys Commercial will replace it with a genuine functional replacement part. This warranty does not apply to the cost of replacing any parts of the Sauber Smart Rollz due to normal wear and tear, alterations, improper installation, physical abuse, misuse or accidental damage.

If proof of purchase cannot be provided at the time of a warranty claim or service, any work carried out on the Sauber Smart Rollz will be at claimant's cost.

The repair of the Sauber Smart Rollz under this warranty does not extend the original period of warranty. If your Sauber Smart Rollz is replaced under this warranty, the replacement will be covered by this warranty for the remainder of the original warranty period. However, you may still have statutory rights after this time.

The benefits conferred by this warranty are in addition to all other rights and remedies in respect of the product as outlined under the Competition and Consumer Act 2010 (Cth) and other State and Territory laws.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

*Two years warranty on parts and labour excluding the battery which has a one year warranty.