

**iVac**

# **FlexiVac Hand Vacuum**

Long Runtime & Quick Recharge

Powerful 80W Dual-Speed

Washable HEPA Filter





# FlexiVac Hand Vacuum

Congratulations on the purchase of your new i-Vac Hand Vacuum. There are many useful features built into your cleaner and we recommend that you carefully read this instruction manual to take the best advantage of these features.

## Features:

1. Vacuum Nozzle
2. Inlet Dust Flap
3. Dust Bin
4. Led Indicator
5. On / Off Power Button
6. Handle
7. Type-C Charging Port

## Accessories:

8. Nozzle
9. Blower Nozzle 1
10. Blower Nozzle 2
11. Blower Nozzle 3
12. 2-In-1 Cleaning Tool
13. Metal Mesh
14. Hepa Filter (Inside The Filter Metal Mesh)
15. USB Type-C Cable

## Specifications:

Motor power: 80W

Battery: 7.4V 2000mAh

Run Time: 18mins\*

Charging Time: 3 hours

\*Runtime is based on low suction.

Net Weight: 0.45Kg

Gross Weight: 0.62Kg

Dust Bin Capacity: 70ml

**Please contact Godfreys Customer Service on 131 929 to find your local spare parts provider.**

# Before You Begin

This cleaner must be operated in accordance with these instructions and used only for domestic household cleaning to remove DRY dirt and dust from household carpets, flooring, walls and fabrics. This cleaner is not fit to be used as an industrial cleaner and will void the manufacturer's warranty if used inappropriately.

## **Please read these instructions thoroughly**

This will ensure you obtain full benefit from your new cleaner. Keep this instruction manual in a handy place for future reference.

## **Important**

Always switch off the vacuum cleaner before cleaning, attempting any maintenance task, fitting or removing accessories, or when not in use. The charger must only be connected to an AC power supply at the voltage shown on the rating label. This cleaner should only be charged with the charger provided. This cleaner should only be used for its intended purpose as described in these instructions.

## **Precautionary measures:**



1. Do not operate the vacuum cleaner too close to heaters, radiators or other hot surfaces.



2. Before inserting the plug into the charging port, make sure your hands are dry.



3. Before turning on the vacuum cleaner, safely remove any large objects from the floor or cleaning surface in order to prevent damage to the filter.



4. Do not use this vacuum cleaner to pick-up water or liquids.

# Safety Precautions & Warnings

**IMPORTANT! This cleaner should only be used for its intended purpose as described in this instruction manual. Never operate the vacuum cleaner without filters.**

When using your vacuum cleaner, basic precautions should always be observed, including the following;

1. This appliance is not intended for use by persons (including children) with reduced physical, sensory, mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
2. Children should be supervised to ensure that they do not play with the appliance.
3. To prevent electrical shock, do not immerse the appliance, battery or power plug into water or other liquids.
4. To prevent electrical shock, do not use the vacuum cleaner outdoors or on wet surfaces.
5. Always check the power cord before use, the power cord and the power adapter should be in a good condition and must not be damaged. If the power cord or the charger adaptor is damaged or defective, it must be replaced.
6. The appliance and charger are intended for domestic indoors use only.
7. Do not unplug the charger by pulling on the power cord. To unplug, grasp the power adapter, not the power cord and gently pull the power adapter from the power socket.
8. Do not handle or operate the appliance with wet hands. Follow electrical safety precautions at all times.
9. Do not attempt to change the attachments while the appliance is switched on. Use only manufacturer's recommended accessories.
10. Do not operate the vacuum cleaner too close to heaters, radiators and other hot surfaces.
11. Do not use the appliance to pick up flammable items or combustible liquids (i.e. gasoline, hot ashes, cigarettes, matches, explosive materials or anything burning) or use in areas where such substances and items may be present.

12. Do not use the appliance to pick up toxic materials (i.e. chlorine, bleach, ammonia).
13. Never operate or use the appliance without the filters in place.
14. Before vacuuming, remove any large or sharp objects from the floor or cleaning surface in order to prevent damage to the filter.
15. Before vacuuming, remove any large or sharp objects from the floor or cleaning surface in order to prevent damage to the filter.
16. If the air inlet is blocked, switch off the cleaner straight away. Clear the blocked object before attempting to start the vacuum cleaner again.
17. Before carrying out any maintenance or cleaning the filters, always switch off the vacuum cleaner.
18. Keep openings away from your face and body.
19. Do not use the vacuum cleaner if it is damaged or broken. If connection cables are damaged, have them replaced immediately.
20. Never clean the vacuum cleaner or any of the electrical parts, especially the electrical connections with water or liquid cleaners.
21. Never attempt to make any modifications to the vacuum cleaner and charger.
22. Always store the appliance, battery and charger indoors in a cool and dry place.
23. Do not use the vacuum to pick up water or liquids. This cleaner is for dry household use only.
24. Damage caused by improper use or by not observing the instructions in this manual will void the warranty.

### **Battery use and care**

1. The appliance is only to be used with the Type-C charging cable provided with the appliance.
2. When the appliance is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects that can make a connection from one terminal to another. Shorting the appliance terminals together may cause burns or a fire.
3. Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact occurs, flush with water immediately. If liquid comes into contact with your eyes, seek medical help immediately.
4. Do not charge or store the appliance outdoors or inside the car. Only charge or store the battery in a dry indoor

- area where the temperature is more than 4°C but less than 40°C. The charger is for indoor use only.
5. Never attempt to open the battery for any reason. If the plastic housing of the battery casing breaks or cracks, immediately discontinue use and do not recharge.
  6. The battery is not a serviceable part.
  7. Before disposal of your battery, fully discharge your battery by running the product until it stops.
  8. The cleaner contains a Li-Ion battery. Do not dispose the appliance with your local garbage. Contact your local council for instructions on how to safely dispose of the battery.
  9. Do not use the charger to charge a non-chargeable battery.
  10. This appliance contains battery cells that are non-replaceable.
  11. Do not handle battery with wet hands.

# Assembly

**WARNING!** Always switch off the cleaner before fitting or removing accessories.



## Crevice Tool

Suitable for cleaning dust from gaps such as doors, seats, cabinet corners, drawers, and ashtrays.



 
## Dusting Brush

It combines the dual functions of suction and wiping, and is suitable for cleaning dust on various surfaces such as cushions, suede parts of foot pads, keyboards, and air-conditioning outlets.




## Vacuum Nozzel

It can be used to extract air from vacuum storage bags.

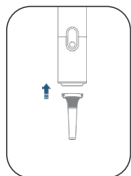


## Blower Nozzle

 It can clean fine dust from gaps such as windows and keyboards, and can also inflate inflatable boats.

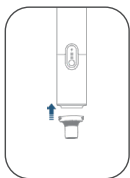

### **Blower Nozzle**

 It can be used to inflate boats.

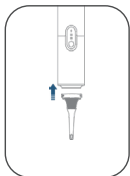


### **Blower Nozzle**

It is suitable for inflating small items such as lifebuoys and balloons, and can also clean fine dust from gaps such as windows and keyboards.

### **WARNING:**

**Air blow tools can only be attached to the air exhaust outlet of the machine. To prevent odor, please remove the dust bin when using the blower feature.**
 
# Instructions for Use

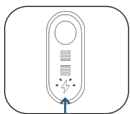

## Charging Method

During charging, the battery LED indicator will blink. When fully charged, the battery LED indicator will stay on for 5 minutes and then turn off. The battery is then fully charged.

### NOTE:

1. Place the vacuum cleaner on a flat, stable surface.
2. Insert the USB power cable into the charging port of the vacuum cleaner.
3. Connect the other end of the power cable to a USB socket (5V  $\Rightarrow$  2A or higher), such as a mobile phone charger or power bank.



## On / Off Operation

1. **Power on / off:** Press and hold for 2 seconds to power on. Press and hold again for 2 seconds to power off.



2. **Switch Levels:** When powered on, press briefly once to switch between 1st and 2nd power levels.

### Note:

If the machine shuts down unexpectedly during operation, inspect the air inlet and the HEPA filter (located behind the metal mesh) for any blockages. If any obstruction is found, clean the affected areas before resuming use.

 
If the shutdown is caused by low battery power, recharge the battery before continuing operation.

# Maintenance

**Please empty the dust bin after each use and ensure it remains dry.**



1. Rotate the dust bin and remove it from the main body.

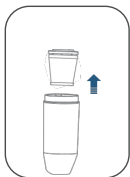

2. Remove the HEPA filter from the dust bin.



3. Empty the contents of the dust bin into a trash can.



4. Rotate the metal mesh to separate it from the HEPA element.



5. If necessary, use a slightly damp rag or disposable paper towels to clean the dust bin.



6. The metal mesh and HEPA filter element can be washed with clean water.



7. Dry the metal mesh and HEPA filter element completely before reuse. Do not expose them to direct sunlight.

**NOTE:**

1. **After cleaning the HEPA filter, make sure it is completely dry before reinstalling it into the dust bin. Installing a wet filter may cause motor corrosion or damage.**
2. **Turn off the power before cleaning or maintaining this product.**
3. **Do not immerse the product in water or spray it with water for cleaning.**
4. **Clean the product gently with a soft cloth dampened with clean water.**

# Troubleshooting

## Problems and Solutions

Please contact Godfreys Commercial Customer Support on 131 929 to find your local spare parts provider.

<b>Fault</b>	<b>Cause</b>	<b>Solution</b>
Cleaner does not start	Flat battery	Charge the hand vacuum
The machine has insufficient battery life after charging	Insufficient charging time	Fully charge the battery according to the instruction described in the charging section
Reduced suction	Dust bin is full Filter is blocked Airway is blocked	Empty the dust bin Clean or replace the filter Clear the airway
Charging indicator light does not flash while charging	Charging cable is faulty	Replace charging cable
Machine suddenly shuts down during use	Filter or air inlet are blocked	Clean air inlet and HEPA filter

# Spare Parts

<b>Part</b>	<b>Part Number</b>
Accessory Kit i-Vac FlexiVac H3	32440610
Dustbin Assy i-Vac FlexiVac H3 Includes Filter Set	33158681
Handvac Assy i-Vac FlexiVac H3	33158682





# FlexiVac

## Hand Vacuum with Blower Function

### Conditions of warranty

Your i-Vac FlexiVac Hand Vacuum, in the case of domestic use, has a one year warranty against product defects and failures when the product is used in accordance with the terms and conditions of this warranty statement.

This warranty is provided by Future Innovation Holdings Pty Ltd Trading as Godfreys Commercial ABN 98 677 632 021. This warranty commences from the original date of purchase and is not transferable. You are required to retain your original proof of purchase for any claims under this warranty. This warranty is valid only in the country where the cleaner is purchased.

Your i-Vac FlexiVac Hand Vacuum must be operated in accordance with these instructions and used only for domestic household cleaning to remove dry dirt and dust from household carpets, flooring and fabrics. Your i-Vac FlexiVac Hand Vacuum is not fit to be used as an industrial cleaner, and is not designed for the collection of vitreous building material including particle board, construction products and similar products such as wood/ fibres, cement, fillers, fibre glass etc or excessive or frequent sand. The infrequent pick-up of these materials may be harmful to your cleaner and will void this warranty.

Accessories and consumables including charging cable and filters, unless defective in manufacture, are not subject to this warranty. In order to prolong the life of accessories and consumables, regular care and maintenance is recommended.

Refer to the instruction manual for further regarding the use and care of your i-Vac FlexiVac Hand Vacuum, as misuse or failure to follow the instructions voids this warranty.

In the event of service or advice being needed, or if you would like to make a claim under this warranty, please immediately stop using the i-Vac FlexiVac Hand Vacuum and contact Godfreys Commercial, 2 Drake Boulevard Altona, VIC 3018, or on 131 929, Monday-Friday 9am-5pm AEST or [commercialsupport@godfreys.com.au](mailto:commercialsupport@godfreys.com.au).

The decision to repair or replace the cleaner is at the discretion of Godfreys Commercial

depending on the circumstances and requirements of any applicable law. If Godfreys Commercial decide to repair or replace your i-Vac FlexiVac Hand Vacuum, it will do so at its own cost. Any transportation costs involved in a claim under this warranty shall be borne by the claimant.

Godfreys Commercial is unable to accept responsibility under this warranty for any repair work not carried out by an authorised Service Agent, or any defect arising from or in connection with the use of non-genuine parts. If any part is no longer available or manufactured, Godfreys Commercial will replace it with a genuine functional replacement part. This warranty does not apply to the cost of replacing any parts of the i-Vac FlexiVac Hand Vacuum due to normal wear and tear, alterations, improper installation, physical abuse, misuse or accidental damage.

If proof of purchase cannot be provided at the time of a warranty claim or service, any work carried out on the i-Vac FlexiVac Hand Vacuum will be at claimant's cost.

The repair of the i-Vac FlexiVac Hand Vacuum under this warranty does not extend the original period of warranty. If your i-Vac FlexiVac Hand Vacuum is replaced under this warranty, the replacement will be covered by this warranty for the remainder of the original warranty period. However, you may still have statutory rights after this time.

The benefits conferred by this warranty are in addition to all other rights and remedies in respect of the product as outlined under the Competition and Consumer Act 2010 (Cth) and other State and Territory laws.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.