




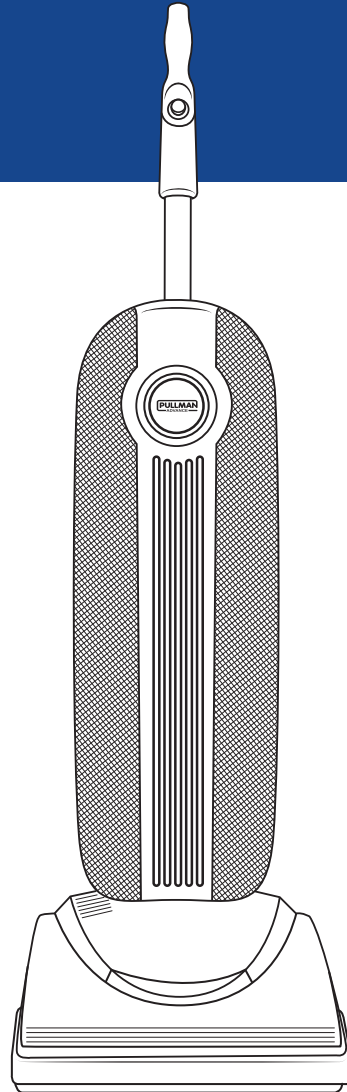

Cordless Upright Vacuum Cleaner

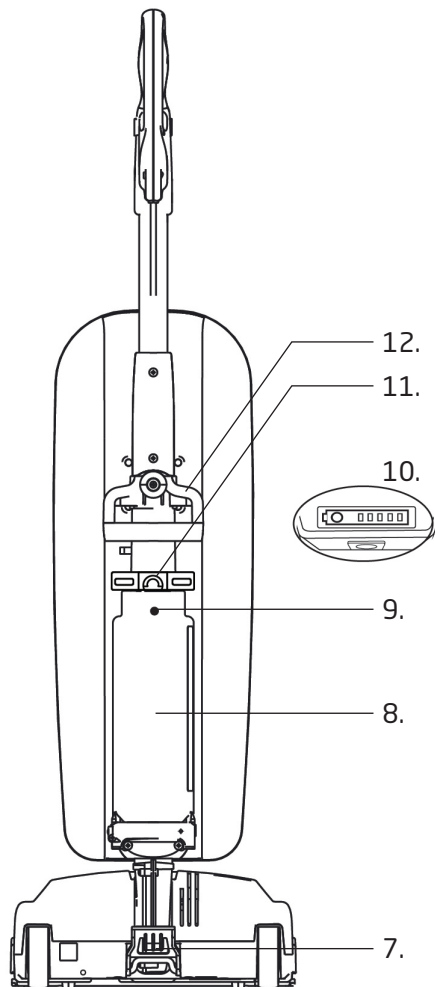

Model: VBUII

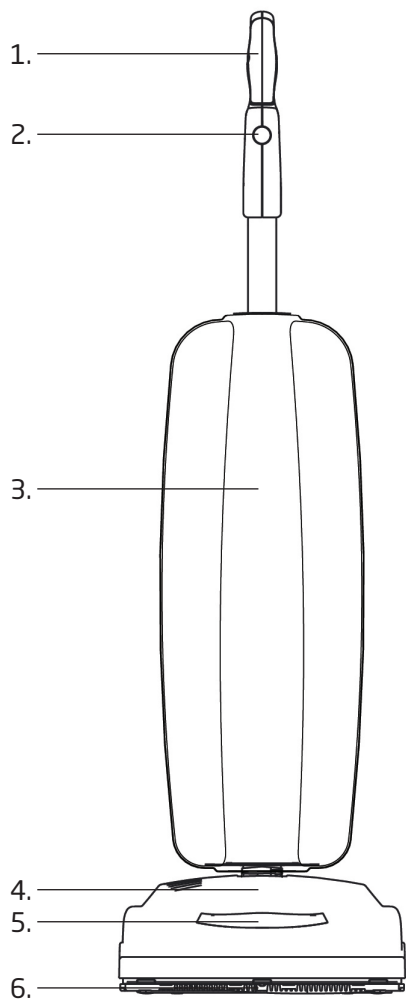

Cordless Upright Vacuum Cleaner

Congratulations on the purchase of your new Pullman Advance Cordless Upright Vacuum Cleaner. Your Pullman Advance Cordless Upright Vacuum Cleaner has been manufactured to the highest quality and performance standards. We recommend that you read these instructions carefully to ensure peak cleaning performance and to extend the life of your Cordless Upright Vacuum Cleaner.

Features:

- | | |
|-------------------------|----------------------------|
| 1. Ergonomic Handle | 8. Battery Pack |
| 2. On/Off Power Switch | 9. Charge Point |
| 3. Bag Compartment | 10. Battery Life Display |
| 4. Vacuum Nozzle | 11. Battery Release Button |
| 5. Headlight | 12. Carry Handle |
| 6. Furniture Guard | 13. Charger (not shown) |
| 7. Handle Release Pedal | |


Specifications:

Voltage: 100-240V ~50Hz
Battery Voltage: 43.8V
Battery Capacity: 2.85Ah
Vacuum Motor Power: 312W
Runtime: 50 mins

Charge Time: 2.5hrs
Capacity: 7L
Noise Levels*: 71dBA
Weight: 5.5Kg

* Noise levels measured at a distance of 1 metre from machine (Model: VBULL) and 1.6 metres above floor, when operating on a hard floor. Measurements recorded using a hand held meter.

Handle vibration does not exceed 2.5m/s² when operating on a smooth floor surface.

The vacuum cleaner and charger are intended for indoor use only. 

Detectable power supply. 

1. BEFORE YOU BEGIN

Congratulations on the purchase of your new Pullman Advance Upright vacuum cleaner Commander 900. Your Pullman Advance Upright has been manufactured to the highest quality and performance standards. We recommend that you read these instructions carefully to ensure peak cleaning performance and to extend the life of the upright vacuum cleaner.

Precautionary measures:

In the event that your vacuum cleaner should become blocked, please switch Off and remove the plug from the Mains power supply before you attempt to remove the blockage.



1. Do not operate the vacuum cleaner too close to heaters, radiators or other hot surfaces.



2. Before inserting the power plug into the power supply, make sure your hands are dry.



3. Before turning on the vacuum cleaner, safely remove any large or sharp objects from the floor or cleaning surface in order to prevent damage to the filter.



4. When removing the power plug from the power supply, do not use the power cable, gently pull the power plug from the power socket.



5. Do not use this vacuum cleaner to pick-up water or liquids.

PRODUCT INFORMATION

This vacuum cleaner is designed for the collection of dust. This machine is for indoor use only. The machine is intended for commercial use, for example in hotels, schools, hospitals, factories, shops, offices and rental businesses other than normal housekeeping purposes.

2. WARNING

IMPORTANT



Always switch off the vacuum cleaner before cleaning, when not in use or attempting any maintenance task. The charger must only be connected to an AC power supply at the voltage shown on the rating label. This cleaner should only be used for its intended purpose as described in this instruction manual. Never operate the vacuum cleaner without a dust bag installed.

Safety precautions and warning:

When using your vacuum cleaner, basic precautions should always be observed, including the following:

1. This vacuum cleaner is not intended for use by persons (including children) with reduced physical, sensory, mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the vacuum cleaner by a person responsible for their safety.
2. Children should be supervised to ensure that they do not play with the vacuum cleaner.
3. To prevent electrical shock, do not immerse the vacuum cleaner, battery or power plug into water or other liquids.
4. To prevent electrical shock, do not use the vacuum cleaner outdoors or on wet surfaces.
5. Always check the power cord before use, the power cord and the power plug should be in good condition and must not be damaged. If the power cord is damaged or defective, it must be replaced by the manufacturer, its service agent or similarly qualified person in order to avoid a hazard.
6. The vacuum cleaner and charger are intended for commercial indoors use only.
7. Do not unplug the charger by pulling on the power cord. To unplug, grasp the power plug, not the power cord and gently pull the power plug from the power socket. Use only Australian and New Zealand electrical safety approved extension cords.
8. Do not pull or carry the vacuum cleaner by the power cable, use the power cable as a handle or pull the power cable around sharp edges or corners. Avoid running the vacuum cleaner over the power cable.
9. Do not handle or operate the vacuum cleaner with wet hands. Follow electrical safety precautions at all times.
10. Extreme caution should be exercised when using the vacuum cleaner on stairs.
11. Do not attempt to change the attachments while the vacuum cleaner is switched on. Use only manufacturer's recommended accessories.
12. Do not operate the vacuum cleaner too close to heaters, radiators or other hot surfaces.
13. Do not use the vacuum cleaner to pick up flammable items or combustible liquids (i.e. gasoline, hot ashes, cigarettes, matches, explosive materials or anything burning) or use in areas where such substances and items may be present.
14. Do not use the vacuum cleaner to pick up toxic materials (i.e. chlorine, bleach, ammonia).
15. Never operate or use the vacuum cleaner without the filters in place.

2. WARNING (CONTINUED)

16. Before vacuuming, remove any large or sharp objects from the floor or cleaning surface in order to prevent damage to the filter.

BATTERY USE AND CARE

1. The vacuum cleaner is only to be used with the charger provided.
2. Only charge the battery with the designated charger.
3. When the vacuum cleaner is not in use, keep it away from metal objects, like paper clips, coins, keys, nails, screws or other small metal objects that can make a connection from one terminal to another. Shorting the vacuum cleaner terminals together may cause burns or a fire.
4. Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact occurs, flush with water immediately. If liquid comes into contact with your eyes, seek medical help immediately.
5. Do not charge or store the vacuum cleaner outdoors or inside the car. Only charge or store the battery in a dry indoor area where the temperature is more than 5°C but less than 45°C. The charger is for indoor use only.
6. Never attempt to open the battery for any reason. If the plastic housing of the battery casing breaks or cracks, immediately discontinue use and do not recharge.
7. The charger is not a serviceable part.
8. Before disposing of your battery, fully discharge the battery by running the vacuum cleaner until it stops.
9. The vacuum cleaner contains a Li-Ion battery. Do not dispose of the battery with your

local garbage. Contact your local council for instructions on how to safely dispose of the battery.

10. Do not use the charger to charge a non-chargeable battery.

SAFE DISPOSAL OF BATTERIES



Li-Ion

1. The batteries must be neutralised through an approved secondary treatment facility prior to disposal as waste.
2. The battery can be recycled at an authorised facility, through a licensed waste carrier.

TRANSPORTING THE MACHINE

1. Take extreme care when moving the machine up or down steps or stairs.
2. Incorrect lifting techniques may result in personal injury. We recommend that the manual handling regulations are followed.
3. Carefully wrap the charger power cord and store in dry indoor location.
4. DO NOT expose the machine to rain or moisture.
5. When transporting the machine ensure that all components and removable parts are securely fastened, and the charger, power cord and plug are not trailing.

STORAGE

1. Always switch off the machine after use.
2. Always empty, wipe down and dry the machine after use.
3. Store the machine in a dry indoor area only.

WARNING

1. **WARNING** - Before undertaking maintenance operations or adjustments switch off machine, and remove the battery.
2. **IMPORTANT** - All other servicing and repairs should only be performed by an engineer or Authorised Service Agent.
3. **IMPORTANT** - Should the machine fail to operate please refer to the fault diagnosis section in the back of this instruction manual. If the problem / remedy is not listed, please contact Godfreys Commercial Customer Service Department for rapid attention.
4. The machine requires minimum maintenance apart from the following checks by the operator prior to use:
5. Body of the machine - Clean with a damp cloth.
6. Charger power cord - Regularly inspect sheath, plug and cord anchorage for damage or loose connection.
7. Air vents - Check for dust accumulation around the air inlet and outlet vents of

the motor, and cooling-air system, clean if necessary. Blocked vents will cause the motor to overheat and may lead to premature failure. Warranty claims for this type of damage will not be accepted.

8. Vacuum filter - Check the vacuum filter is clean and replace as appropriate.
9. Vacuum head - Check and remove any debris or lint build-up from the head.




WASTE ELECTRICAL & ELECTRONIC EQUIPMENT (WEEE)



DO NOT dispose of this device with unsorted waste. Improper disposal may be harmful to the environment and human health. Please refer to your local waste authority for information on return and collection systems in your area.



3. ASSEMBLY

Always switch off your vacuum cleaner and remove the charger from the charge point and remove the battery before assembling.

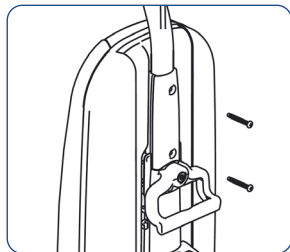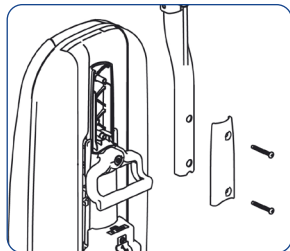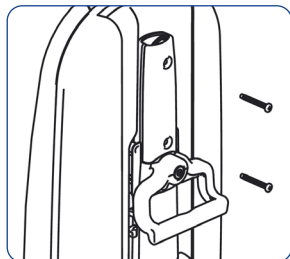

Connecting the handle


1. The vacuum cleaner and the handle are packed separately and require assembly.
2. Remove the handle bracket by removing the two screws.
3. Place handle onto the back of the vacuum cleaner, aligning holes with pegs.
4. Place the handle bracket back into position.
5. Secure with two screws removed before. Tuck the cord into the space to the left of the handle.
6. Open the bag compartment to ensure a vacuum bag is in place.
7. Your vacuum cleaner is now ready for use.

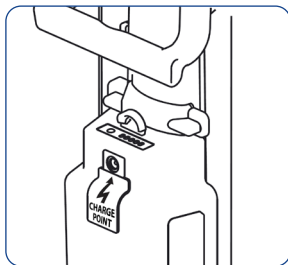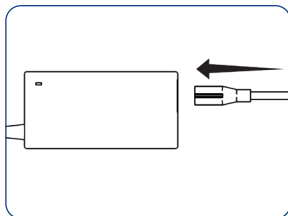

Charging Battery


1. When you receive your unit the battery is partially charged and will run for a short time. To fully charge the battery see Battery Charging section.
2. The battery is located on the back of the vacuum cleaner. It can be charged while installed on the vacuum cleaner, or the battery can be removed from the vacuum cleaner and charged independently (see removing and reinstalling the battery).
3. Plug the AC cable into the charger and into a wall socket.
4. Plug the charger DC cable into the Charge Point on the battery.
5. The Charger LED light will be red during charging and will turn green when the battery pack is fully charged.

3. ASSEMBLY (CONTINUED)

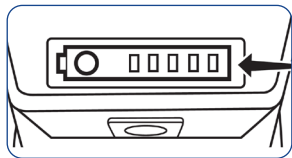

Battery life display


1. Press the button on the battery to illuminate the LED lights.
2. When the battery is fully charged there will be four green lights and one red light showing.
3. As the battery is discharged during use, the number of green lights showing will reduce from four to none.
4. When all of the green lights are off and only the red light is showing, there is a small amount of time remaining before the battery will be fully discharged and will require recharging.

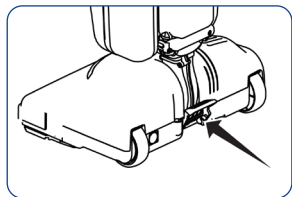

Reclining the handle


1. Press the Handle Release Pedal located on the back of the vacuum cleaner with your foot to recline the handle.

4. INSTRUCTIONS FOR USE

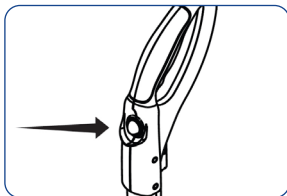

On/Off switch



1. Turn the switch on to use the vacuum cleaner. If the vacuum cleaner doesn't turn on, check that the battery is charged.
2. Always unplug the charger from the Charge Point before use.

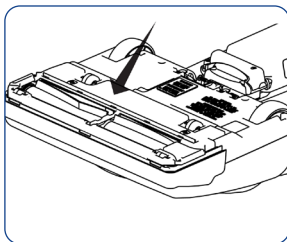

Bare floor cleaning

Your vacuum cleaner is equipped with a squeegee to improve its effectiveness in cleaning bare floors.

4. INSTRUCTIONS FOR USE (CONTINUED)




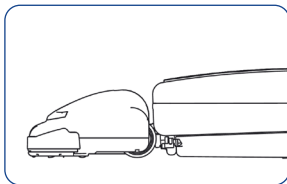
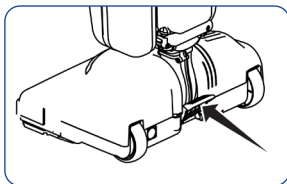


Vacuuming under furniture

Your vacuum cleaner will lay flat on the floor for effective cleaning under beds and tables.

1. Press the Handle Release Pedal once for routine vacuum cleaning.
2. Continue to lower the handle to enable the vacuum cleaner to lay flat on the floor for cleaning under furniture.

5. MAINTENANCE

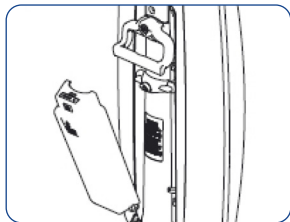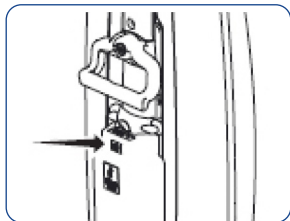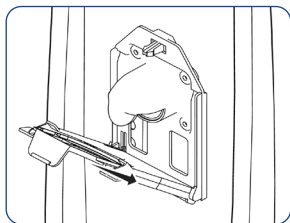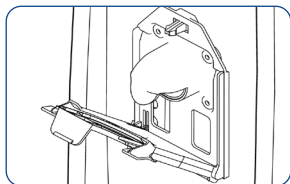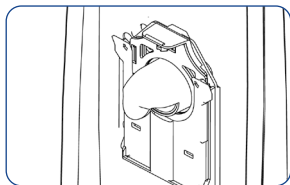

Replacing the Vacuum Bag

NOTE: Turn the vacuum cleaner off and remove the battery.

1. Unzip the bag compartment.
2. Remove the used vacuum bag by pulling the green bag collar tab away from the vacuum cleaner. Slide the used bag out of the bag holder which automatically seals the bag opening. Discard the used bag.
3. To install a new bag, slide the bottom of the green bag collar into the bag holder until it “snaps” into place.
4. Push the top of the bag collar upward until the collar “snaps” into place on the vacuum cleaner.
5. Tuck the bag corners into the bag compartment, then zip the bag compartment closed.



Removing and reinstalling the battery

NOTE: Turn the vacuum cleaner off. If the battery charger is plugged into the charge point on the vacuum cleaner, remove the charger from the charge point before removing the battery.

The battery can be removed and charged independently from the vacuum cleaner.

1. To remove the battery push up on the release button and lift the battery off.
2. To replace the battery, line up the bottom of the battery with the posts at the base of the coupling. Push the battery in until it clicks.



5. MAINTENANCE (CONTINUED)

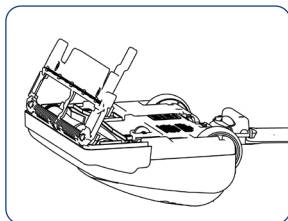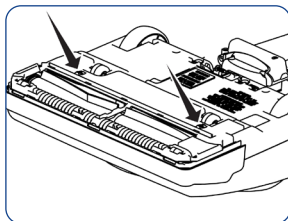

Removing and reinstalling the bottom plate

WARNING! To reduce the risk of electrical shock or injury from moving parts, turn the vacuum cleaner off and remove the battery before servicing or cleaning the vacuum cleaner.

1. Make sure the vacuum cleaner is turned Off.
2. Remove the battery.
3. Press the Handle Release Pedal to place the vacuum cleaner in the flat position.
4. Turn the vacuum cleaner over, exposing the bottom plate.
5. Turn the two screws a quarter turn to release the bottom plate. Remove the bottom plate.
6. To reinstall the bottom plate: Align the front edge of the bottom plate into the notches inside the nozzle.
7. Press the bottom plate into position until the plate “clicks” on both sides. Tighten the two screws a quarter turn to secure the bottom plate.
8. Replace the Battery (see see Removing and Reinstalling the Battery, page 13).

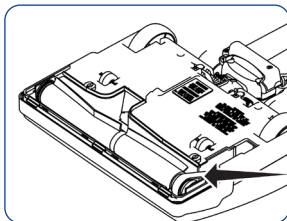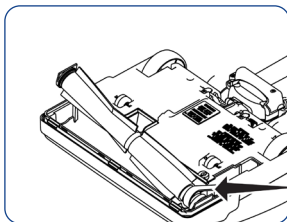


Replacing the vacuum belt

WARNING! To reduce the risk of electrical shock or injury from moving parts, turn the vacuum cleaner off and remove the battery before servicing or cleaning the vacuum cleaner.

NOTE: To ensure maximum cleaning efficiency, the belt should be checked regularly to be sure it is in good condition. Check to see if the belt is stretched, cracked, or if excessive slipping is occurring. Replace if needed.

1. Turn the vacuum cleaner off and unplug the charger from the Charge Point.
2. Remove the battery.
3. Remove the bottom plate.
4. Remove the brushroll and the worn or broken belt from the brushroll pulley and the motor drive shaft.
5. Loop the new belt around the motor drive shaft and the brushroll.
6. Reinstall the brushroll into the nozzle. Turn the brushroll by hand, making sure the belt is not twisted and all rotating parts move smoothly.
7. Reinstall the bottom plate.
8. Replace the battery.

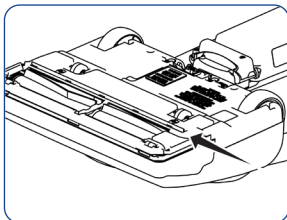

Replacing the squeegee

WARNING! To reduce the risk of electrical shock or injury from moving parts, turn the vacuum cleaner off and remove the battery before servicing or cleaning the vacuum cleaner.

If your squeegee splits or begins to look worn, simply slide the worn squeegee from its track and slide a new one into the track. If you have trouble installing the new squeegee, please contact Authorized Service Center.

6. TROUBLESHOOTING

Problems and solution


Please contact Pullman Customer Support on 131 929 to find your local spare parts provider.

Fault	Cause	Solution
Cleaner will not switch on / Power indicator flash.	Flat battery	Connect the Battery to the Battery Charger.
The battery can't be charged.	The battery is not properly making contact to the charger jack. The charger is not properly connected to the mains power supply	Re-insert the charger jack into the battery charging port.
Reduced suction. The cleaner suddenly stops.	Faulty charger/faulty battery Dust bag is full of dust. The roller brush is blocked	Replace charger/battery Replace the dust bag. Switch off the vacuum cleaner and remove the battery, then take out the roller brush from the power head and remove any hair from the roller brush.


7. SPARE PARTS

Product SKU	Product Description
33202261	Battery Pullman Advance VBUII
32440593	Bags 10pk Pullman Advance
33202262	Charger Pullman Advance VBUII
33301040	Motor Assy Pullman Advance
33158116	Pedal Assy Pullman Advance
32102330	Belt 2pk Pullman Advance VBUII
33788242	Agitator Pullman Advance VBUII

8. EXPLODED DIAGRAMS

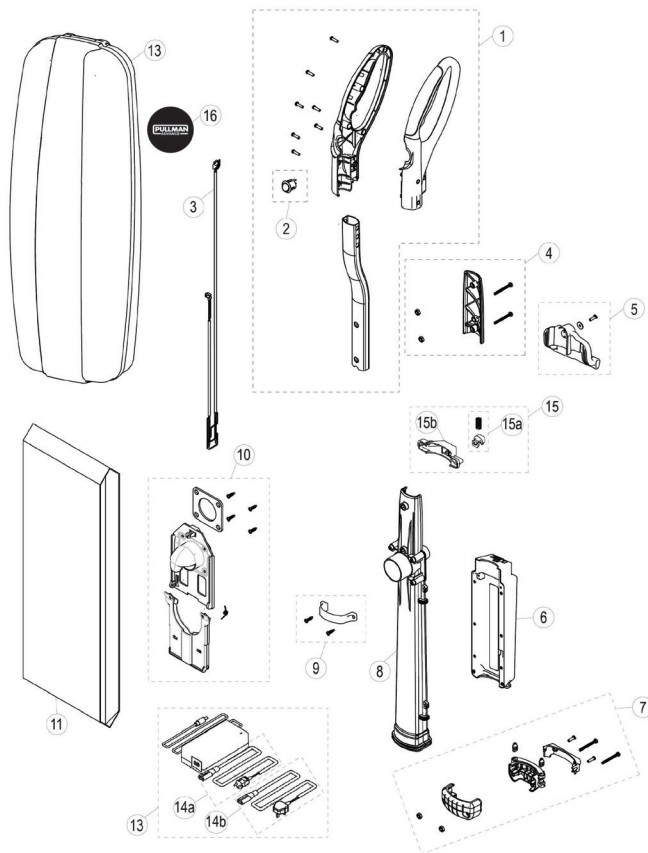

Ref. No.	Part No.	SKU	Description
6	X9184	33202261	Battery
11	05-4741-0000	32440593	Dust Bags 10pk
13	04-4074-0000	33202262	Charger Adaptor

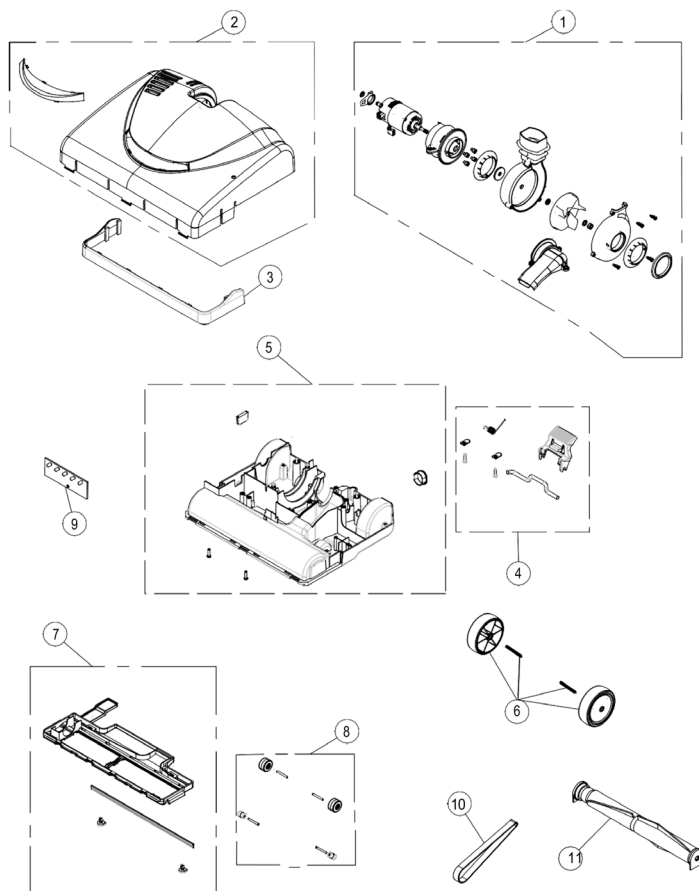

Ref. No.	Part No.	SKU	Description
1	D223-2300	33301040	Motor Assembly
4	D223-0700	33158116	Pedal Assembly
10	D014-0814	32102330	Belt 2pk
11	D012-2300	33788242	Agitator

Conditions of warranty



Your Pullman Advance Upright, in the case of domestic use, has a one year warranty against product defects and failures when the product is used in accordance with the terms and conditions of this warranty statement.

This warranty is provided by Future Innovation Holdings Pty Ltd Trading as Godfreys Commercial ABN 98 677 632 021. This warranty commences from the original date of purchase and is not transferable. You are required to retain your original proof of purchase for any claims under this warranty. This warranty is valid only in the country where the cleaner is purchased.

Your Pullman Advance Upright must be operated in accordance with these instructions and used only for domestic household cleaning to remove dry dirt and dust from household carpets, flooring and fabrics. Your Pullman Advance Upright is not fit to be used as an industrial cleaner, and is not designed for the collection of vitreous building material including particle board, construction products and similar products such as wood/ fibres, cement, fillers, fibre glass etc or excessive or frequent sand. The infrequent pick-up of these materials may be harmful to your cleaner and will void this warranty.

Accessories and consumables including dust bags and filters, unless defective in manufacture, are not subject to this warranty. In order to prolong the life of accessories and consumables, regular care and maintenance is recommended.

Refer to the instruction manual for further regarding the use and care of your Pullman Advance Upright, as misuse or failure to follow the instructions voids this warranty.

In the event of service or advice being needed, or if you would like to make a claim under this warranty, please immediately stop using the Pullman Advance Upright and contact Godfreys Commercial, 2 Drake Boulevard Altona, VIC 3018, or on 131 929, Monday-Friday 9am-5pm AEST or commercialsupport@godfreys.com.au.

The decision to repair or replace the cleaner is at the discretion of Godfreys Commercial depending on the circumstances and requirements of any applicable law. If Godfreys Commercial decide to repair or replace your Pullman Advance Upright, it will do so at its own cost. Any transportation costs involved in a claim under this warranty shall be borne by the claimant.

Godfreys Commercial is unable to accept responsibility under this warranty for any repair work not carried out by an authorised Service Agent, or any defect arising from or in connection with the use of non-genuine parts. If any part is no longer available or manufactured, Godfreys Commercial will replace it with a genuine functional replacement part. This warranty does not apply to the cost of replacing any parts of the Pullman Advance Upright due to normal wear and tear, alterations, improper installation, physical abuse, misuse or accidental damage.

If proof of purchase cannot be provided at the time of a warranty claim or service, any work carried out on the Pullman Advance Upright will be at claimant's cost.

The repair of the Pullman Advance Upright under this warranty does not extend the original period of warranty. If your Pullman Advance Upright is replaced under this warranty, the replacement will be covered by this warranty for the remainder of the original warranty period. However, you may still have statutory rights after this time.

The benefits conferred by this warranty are in addition to all other rights and remedies in respect of the product as outlined under the Competition and Consumer Act 2010 (Cth) and other State and Territory laws.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.



PROFESSIONAL COMMERCIAL CLEANING