



QUALITY CLEANING SOLUTIONS



IDEAL FOR:

-  Schools
-  Offices
-  Motels & Hotels
-  Restaurants & Cafes

**10L DRY
VACUUM**

1200W

PULL10LD



IMPORTANT

Always switch off the cleaner and remove the plug from the electricity power supply before cleaning your appliance, when not in use or attempting any maintenance task. The cleaner must only be connected to an AC power supply at the voltage shown on the rating label. This cleaner should only be used for its intended purpose as described in this instruction manual. **Never operate the vacuum cleaner without filters and dust bag.**

SAFETY PRECAUTIONS AND WARNING:

WHEN USING YOUR VACUUM CLEANER, BASIC PRECAUTIONS SHOULD ALWAYS BE OBSERVED, INCLUDING THE FOLLOWING;

1. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
2. Children should be supervised to ensure that they do not play with the appliance.
3. To prevent electrical shock, do not immerse the appliance, power cord or power plug into water or other liquids.
4. To prevent electrical shock, do not use the vacuum cleaner outdoors or on wet surfaces.
5. Always check the power cord before use, the power cord and the plug should be in a good condition and must not be damaged. If the power supply cord is damaged or defective, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
6. Do not unplug by pulling on the power cord. To unplug, grasp the plug not the power cord. Use only Australian and New Zealand electrical safety approved extension cords.
7. Do not pull or carry the appliance by the power cable, use the power cable as a handle or pull the power cable around shaft edges or corners. Avoid running the appliance over the power cable.
8. Ensure the appliance is switched off before unplugging.
9. Do not handle or operate the appliance with wet hands and follow electrical safety precautions at all times.
10. Extreme caution should be exercised when using the appliance on stairs.
11. Do not attempt to change the attachments while the appliance is plugged in to mains power supply. Switch off and remove plug from mains power supply. Use only manufacturer's recommended accessories.
12. Do not operate the vacuum cleaner too close to the heaters, radiators and other hot surfaces.
13. Do not use the appliance to pick up flammable items or combustible liquids (i.e. gasoline, hot ashes cigarettes, matches, explosive materials or anything burning) or use in areas where such substances and items may be present.
14. Do not use the appliance to pick up toxic materials (i.e. chlorine bleach, ammonia).
15. Ensure the appliance is disconnected from the main power supply before connecting the hose to the unit.
16. Do not operate or use the appliance without dust bag and filters in place.
17. Before vacuuming, remove any large or shaft objects from the floor or cleaning surface in order to prevent damage to the filter.

18. If the hose inlet, gulper floor tool or the telescopic chrome tube is blocked, switch off the cleaner straight away and remove from the main power. First clear the blocked object before attempting to start the cleaner vacuum again.
19. Hold the plug when rewinding onto the cord reel. To prevent accidental injury do not allow the plug to whip when rewinding.
20. Do not extend the power cord beyond the yellow mark.
21. Do not leave the appliance unattended when it is connected to a mains power supply.
22. Before carrying out any maintenance service or cleaning the filters, always switch off the vacuum cleaner and disconnect the plug from power supply.
23. Keep ends of the hose, telescopic chrome tube and other openings away from your face and body.
24. Do not use the vacuum cleaner if it is damaged or breaks down. Check the electrical regularly for defects. If connection cables, electrical hoses, electrical contacts and electric tubes are damaged, have them replace immediately.
25. Never clean the vacuum cleaner or any of the electrical parts, especially the electrical connections with water or liquid cleaners.
26. Never attempt to make any modifications electrically to the vacuum cleaner.
27. Always store the appliance indoors in a cool and dry place.
28. Do not pickup water, dry use only.
29. Damage caused by improper use or by not observing the instructions in this manual will void warranty.

BEFORE YOU BEGIN



1. **Do not** operate the vacuum cleaner too close to heaters, radiators, and other hot surfaces.



2. Before inserting the plug into the wall, make sure your hand is dry.



3. Before turning on the vacuum cleaner, remove any large or sharp objects from the floor or cleaning surface in order to prevent damage to the filter.



4. When you want to pull the plug from the wall, **do not** use the power cable, gently pull the plug from the power socket.
5. If the hose inlet or telescopic chrome tube are blocked, you should switch off the cleaner straight away and remove from mains power. First clear the blocked substance before attempting to start the vacuum cleaner again.

This machine is equipped with a cord and plug. In the event that either of these parts get damaged, it must be repaired by a qualified technician.

KNOW YOUR PRODUCT

1. Hose Inlet
2. Carry Handle
3. Power Cord (not shown)
4. Hose Assembly with Handle
5. On/Off Switch
6. Connection Latches
7. Canister
8. Castor Wheel
9. Rear Wheel
10. Telescopic Chrome Tube
11. Gulper Floor Tool
12. Crevice Tool
13. Dusting Brush
14. 2 x Paper Dust Bags
15. 1 x Reusable Dust Bag

Technical Information

Model: PULL10LD

240V ~ 50HZ

PMAX: 1200W

PNOM: 1100W



 
1.



12.



13.



14.



15.

ASSEMBLY (WITH HOSE)



1. Connect the handle to the telescopic chrome tube.



2. Extend and retract the telescopic chrome tube using the release button.



3. Connect the tube to the desired cleaning accessory.



ASSEMBLY (WITH HOSE)



4. Insert the hose end into the hose inlet. Turn clockwise to lock the hose in place.



5. Once assembled as per diagram, start the cleaner by pressing the On/Off switch.

ASSEMBLY

Part 3



Variable Suction Control

Slide the regulator on handle to adjust the suction power.

Safety Valve

When the air path of the cleaner is blocked, safety valve will function automatically prevent the motor over heating.

Note: If the bleed valve remains open, turn off the vacuum cleaner, remove the mains plug, and check the hose and accessories for blockages, check to make sure that the bag is not full (if found replace with a new one).

ACCESSORIES



The gulper floor tool is ideal for cleaning on carpets and hard floors.



Crevice Tool



Dusting Brush

Fitting the Dusting Brush and Crevice Tool

To fit the accessories to the tube, gently insert the tube into the top of the dusting brush or crevice tool.

Dusting Brush – ideal for cleaning furniture, curtains and upholstery

Crevice Tool – ideal for cleaning in tight spaces

OPERATION

Dry Vacuum Cleaning



1. Ensure the HEPA filter is always fitted before the cleaner is used.
2. This cleaner should be used with a dust bag.
3. Please ensure dust bag is fitted properly before use.
4. Once the dust bag is full we recommend a new dust bag be fitted.

MAINTENANCE

ATTENTION: BEFORE ANY MAINTENANCE AND CLEANING ñ ENSURE THE MACHINE IS TURNED OFF AND THE POWER CABLE IS DISCONNECTED FROM THE MAINS POWER SUPPLY.



Dust Bag Cleaning and Replacing

1. Lift the latches to release and open the top cover, take out the dust bag.

MAINTENANCE (CONTINUED)



2. If dust bag is full, replace with a new dust bag.



3. Position dust bag back into cleaner and make sure the opening of the bag aligns with the hose inlet.

NOTE: THE SEAL RING AROUND DUST BAG OPENING SHOULD COVER THE HOSE INLET CONNECTOR INSIDE THE CANISTER.



Replacing the HEPA Filter

1. Turn the HEPA filter anticlockwise until it can be lifted from the canister lid.



2. Replace with a new HEPA filter and turn clockwise to secure.

NOTE: REGULARLY CHECK THE HOSE, TUBE AND ACCESSORIES TO ENSURE THEY ARE NOT BLOCKED.

SPECIFICATIONS

Watts: 1200W
Capacity: 7L
Filtration: HEPA
Rod: 2 pcs
Hose Length: 1.8M
Power Cable Length: 8M
Net Weight: 6.6kg

TROUBLESHOOTING

TROUBLE	POSSIBLE CAUSE	REMEDY
Suction weakens or cleaner runs hot	Clogged filter	Brush dirt from filter. If condition continues, change filter.
	Air leak	Check all fittings for tight fit (floor tool, hoses, etc.). Check that tank cover is sealed properly.
	Obstruction in hose or floor tool	Check floor tool, hose, etc. for obstructions, and remove if present.

CUSTOMER CARE

Please contact Godfreys Commercial Customer Support on 131 929 to find your local spare parts provider.

PRODUCT NUMBER	PRODUCT DESCRIPTION
31220504	Hose Assembly
31154849	Crevice Tool
32200955	HEPA Filter
32440355	Dust Bag 5pk
33400189	Reusable Cloth Bag 1pk
33500414	Castor Wheel
33500415	Rear Wheel Assembly Set

Conditions of warranty



Your Pullman cleaner, in the case of domestic use, has a one year warranty against product defects and failures when the product is used in accordance with the terms and conditions of this warranty statement.

This warranty is provided by Future Innovation Holdings Pty Ltd Trading as Godfreys Commercial ABN 98 677 632 021. This warranty commences from the original date of purchase and is not transferable. You are required to retain your original proof of purchase for any claims under this warranty. This warranty is valid only in the country where the cleaner is purchased.

Your Pullman cleaner must be operated in accordance with these instructions and used only for domestic household cleaning to remove dry dirt and dust from household carpets, flooring and fabrics. Your Pullman cleaner is not fit to be used as an industrial cleaner, and is not designed for the collection of vitreous building material including particle board, construction products and similar products such as wood/ fibres, cement, fillers, fibre glass etc or excessive or frequent sand. The infrequent pick-up of these materials may be harmful to your cleaner and will void this warranty.

Accessories and consumables including dust bags and filters, unless defective in manufacture, are not subject to this warranty. In order to prolong the life of accessories and consumables, regular care and maintenance is recommended.

Refer to the instruction manual for further regarding the use and care of your Pullman cleaner, as misuse or failure to follow the instructions voids this warranty.

In the event of service or advice being needed, or if you would like to make a claim under this warranty, please immediately stop using the Pullman cleaner and contact Godfreys Commercial, 2 Drake Boulevard Altona, VIC 3018 on 131 929, Monday-Friday 9am-5pm AEST or commercialsupport@godfreys.com.au.

The decision to repair or replace the cleaner is at the discretion of Godfreys Commercial depending on the circumstances and requirements of any applicable law. If Godfreys Commercial decide to repair or replace your Pullman cleaner, it will do so at its own cost. Any transportation costs involved in a claim under this warranty shall be borne by the claimant.

Godfreys Commercial is unable to accept responsibility under this warranty for any repair work not carried out by an authorised Service Agent, or any defect arising from or in connection with the use of non-genuine parts. If any part is no longer available or manufactured, Godfreys Commercial will replace it with a genuine functional replacement part. This warranty does not apply to the cost of replacing any parts of the Pullman cleaner due to normal wear and tear, alterations, improper installation, physical abuse, misuse or accidental damage.

If proof of purchase cannot be provided at the time of a warranty claim or service, any work carried out on the Pullman cleaner will be at claimant's cost.

The repair of the Pullman cleaner under this warranty does not extend the original period of warranty. If your Pullman cleaner is replaced under this warranty, the replacement will be covered by this warranty for the remainder of the original warranty period. However, you may still have statutory rights after this time.

The benefits conferred by this warranty are in addition to all other rights and remedies in respect of the product as outlined under the Competition and Consumer Act 2010 (Cth) and other State and Territory laws.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.



Future Innovation Holdings Pty. Ltd. trading as Godfreys Commercial

ABN: 98 677 632 021

2 Drake Boulevard Altona, Victoria 3018

Customer Support:

131 929

www.godfreyscommercial.com.au

commercialsupport@godfreys.com.au

Pullman® is a registered trademark.