

iVac

Tornado Bagless Vacuum

Powerful 1800W Motor
Cyclonic Performance
HEPA Filtration





Tornado Bagless Vacuum

Congratulations on the purchase of your new i-Vac Vacuum Cleaner. There are many useful features built into your cleaner and we recommend that you carefully read this instruction manual to take the best advantage of these features.

Features:

1. Telescopic rod
2. Filter release button
3. Dust bin release button
4. HEPA filter
5. On/Off button
6. Suction adjust slide
7. Cord retract button
8. Dust bin
9. Cone filter
10. Wheels
11. Dust release button
12. Combination floor tool
13. Hose inlet
14. Flexible hose

Accessories:

15. 2-In-1 cleaning tool (dusting brush / crevice tool)

Specifications:

Power: 1800W Max

Dust Capacity: 1.6L

Tube : Telescopic Rod

Voltage : 220-240V~50Hz

Power Cable Length: 4.6m

Hose Length: 1.5m

Weight: 7.24Kg

Noise Level: <78dBa

Please contact i-Vac Customer Service on 131 929 to find your local spare parts provider.

Before You Begin

This cleaner must be operated in accordance with these instructions and used only for domestic household cleaning to remove DRY dirt and dust from household carpets, flooring, walls and fabrics. This cleaner is not fit to be used as an industrial cleaner and will void the manufacturer's warranty if used inappropriately.

Please read these instructions thoroughly

This will ensure you obtain full benefit from your new cleaner. Keep this instruction manual in a handy place for future reference.

Important

Always switch off the appliance before cleaning, attempting any maintenance task, fitting or removing accessories, or when not in use. The charger must only be connected to an AC power supply at the voltage shown on the rating label. This cleaner should only be charged with the charger provided. This cleaner should only be used for its intended purpose as described in these instructions.

Precautionary measures:



1. Do not operate the vacuum cleaner too close to heaters, radiators or other hot surfaces.



2. Before inserting the plug into the wall, make sure your hands are dry.



3. Before turning on the vacuum cleaner, safely remove any sharp objects from the floor or cleaning surface in order to prevent damage to the filter.



4. When you want to remove the plug from the power socket, do not use the power cable, gently pull the plug from the power socket.



5. Do not use this vacuum cleaner to pick-up water or liquids.

Safety Precautions & Warnings



IMPORTANT! Always switch off the wall outlet, cleaner and remove the plug from the electricity power supply before cleaning your appliance, when not in use or attempting any maintenance task. The cleaner must only be connected to an AC power supply at the voltage shown on the rating label. This cleaner should only be used for its intended purpose as described in this instruction manual. **Never operate the vacuum cleaner without filters.**

When using your vacuum cleaner, basic precautions should always be observed, including the following;

1. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
2. Children should be supervised to ensure that they do not play with the appliance.
3. To prevent electrical shock, do not immerse the appliance, power cord or power plug into water or other liquids.
4. To prevent electrical shock, do not use the vacuum cleaner outdoors or on wet surfaces.
5. Always check the power cord before use, the power cord and the plug should be in a good condition and must not be damaged. If the power supply cord is damaged or defective, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
6. Do not unplug by pulling on the power cord. To unplug, grasp the plug not the power cord.
7. Do not pull or carry the appliance by the power cable, use the power cable as a handle or pull the power cable around shaft edges or corners. Avoid running the appliance over the power cable.
8. Ensure the appliance is switched off before unplugging.
9. Do not handle or operate the appliance with wet hands and follow electrical safety precautions at all times.
10. Extreme caution should be exercised when using the appliance on stairs.
11. Do not attempt to change the attachments while the appliance is plugged in to mains power supply. Switch off and remove plug from mains power supply. Use only manufacturer's recommended accessories.
12. Do not operate the vacuum cleaner too close to heaters, radiators and other hot surfaces.
13. Do not use the appliance to pick up flammable items or combustible liquids (i.e. petrol, hot ashes cigarettes, matches, explosive materials

Use only Australian and New Zealand electrical safety approved extension cords.

- or anything burning) or use in areas where such substances and items may be present.
14. Do not use the appliance to pick up toxic materials (i.e. chlorine bleach, ammonia).
 15. Ensure the appliance is disconnected from the mains power supply before connecting the hose to the unit.
 16. Do not operate or use the appliance without the filters in place.
 17. Before vacuuming, remove any large or sharp objects from the floor or cleaning surface in order to prevent damage to the filter.
 18. If the air inlet, floor head or the telescopic rod is blocked, switch off the cleaner straight away and remove from the mains power. First clear the blocked object before attempting to start the vacuum cleaner again.
 19. Hold the plug when using the cord retract. To prevent accidental injury do not allow the plug to whip when rewinding.
 20. Do not extend the power cable beyond the yellow mark.
 21. Do not leave the appliance unattended when it is connected to a mains power supply.
 22. Before carrying out any maintenance service or cleaning the filters, always switch off the vacuum cleaner and disconnect the plug from power supply.
 23. Keep the ends of the hose, telescopic rod and other openings away from your face and body.
 24. Do not use the vacuum cleaner if it is damaged or breaks down. Check the electrical regularly for defects. If connection cables, electrical hoses, electrical contacts and electric tubes are damaged, have them replaced immediately.
 25. Never clean the vacuum cleaner or any of the electrical parts, especially the electrical connections with water or liquid cleaners.
 26. Never attempt to make any modifications electrically to the vacuum cleaner.
 27. Always store the appliance indoors in a cool and dry place.
 28. Do not pick up water. This vacuum is for dry household indoor use only.
 29. Damage caused by improper use or by not observing the instructions in this manual will void warranty.

Assembly



IMPORTANT! Always remove the plug from the power socket before fitting or removing accessories! Do not exceed the blue mark when pulling out the cord. The yellow mark shows the ideal cable length.



1. Connect the hose to the cleaner at the hose inlet.



2. Insert the telescopic rod into the combination floor tool.



3. Fit the other end of the telescopic rod to the handle.

Instructions for Use



1. Press the On/Off button to turn the cleaner on.



2. Suction can be varied by sliding the suction control slider.

Accessories



2-In-1 Cleaning Tool - Dusting Brush

The dusting brush can be used as a soft dusting brush for cleaning a variety of surfaces or as an upholstery tool for cleaning furniture.



2-In-1 Cleaning Tool - Crevice Tool

The crevice tool can be used to clean hard-to-reach places or in tight crevices.



Carpet



Hard floors

Combination floor head

Ideal for daily cleaning on carpets and hard floors.

Maintenance

WARNING! Ensure the cleaner is not connected to the mains powers supply when performing any maintenance duties.



Emptying the dust canister

1. To empty the dust canister, press dust canister release button on the dust canister handle and lift up.
2. Take the dust canister out of the machine and hold the dust canister over the rubbish bin, push the release button to open the bottom of the dust canister, and the dirt and dust will fall into the bin.
3. Close the dust canister and place back into the machine it will click into place and you can start to vacuum again.



Cleaning or changing the HEPA filter

1. Press the canister release button to remove the canister from the machine.
2. Unlock the the canister lid by pushing the lock up and out.
3. Take out the HEPA Filter and rinse under lukewarm water.
4. Air dry the HEPA Filter for 24 hours and assemble again once it is completely dry.



Cleaning and changing the cone filter

1. To clean the cone filter, turn anti-clockwise and remove from dust bin.
2. Rinse with lukewarm water and allow to dry or wipe with cloth.
3. Reinsert filter back into dust bin, turn clockwise to lock, then close the base flap.
4. Reinsert the dust bin back into the appliance. It will click into place and you can start to vacuum again.



Replacing the exhaust air filter

WARNING! Ensure the cleaner is not connected to the mains powers supply when performing any maintenance task.

1. Press the filter grill release button on the filter grill.
2. Remove the filter from the filter grill.
3. Rinse under lukewarm water and air dry for 24 hours before use.
4. Refit the filter to the filter grill and refit the grill to the machine.

Note:

1. Filters should be cleaned or replaced at least once a year or when they become visibly dirty.
2. Always operate the cleaner with filters installed to prevent motor damage and maximise performance.
3. Disconnect from electrical outlet, before cleaning or replacing filters.
4. Do not use a washing machine to wash any filters or a hair drier to dry the filters.

Troubleshooting

Problems and solutions

Please contact Godfreys Commercial Customer Support on 131 929 to find your local spare parts provider.

Fault	Solution
The cleaner will not turn on	<p>Check the power cable is inserted correctly. Remove the plug from the power supply and then reinsert it into the power supply.</p> <p>Press the on / off switch.</p>
The vacuum performance is deteriorating	<p>Check the appliance to ensure there are no blockages. Clear any blockages that may be found. Check that the dust bin filter and exhaust filter are not dusty; empty the dust bin or replace dust bin filters and exhaust filter.</p> <p>Check the suction control slider is not set to the minimum setting.</p>
The cleaner makes an abnormal sound when switched on	<p>Turn off the cleaner immediately. Check the appliance to ensure there are no blockages. Clear any blockages that may be found.</p> <p>Check the dust bin is installed correctly.</p>

Spare Parts

Part	Part Number
Filter Set: Exhaust filter, inlet filter, dustbin filter	32201213
Dust canister	33155070
Rod	31300417
Hose	31220688
Motor	33300803

Notes



Tornado Bagless Vacuum

Conditions of warranty

Your i-Vac Tornado Bagless Vacuum, in the case of domestic use, has a one year warranty against product defects and failures when the product is used in accordance with the terms and conditions of this warranty statement.

This warranty is provided by Future Innovation Holdings Pty Ltd Trading as Godfreys Commercial ABN 98 677 632 021. This warranty commences from the original date of purchase and is not transferable. You are required to retain your original proof of purchase for any claims under this warranty. This warranty is valid only in the country where the cleaner is purchased.

Your i-Vac Tornado Bagless Vacuum must be operated in accordance with these instructions and used only for domestic household cleaning to remove dry dirt and dust from household carpets, flooring and fabrics. Your i-Vac Tornado Bagless Vacuum is not fit to be used as an industrial cleaner, and is not designed for the collection of vitreous building material including particle board, construction products and similar products such as wood/ fibres, cement, fillers, fibre glass etc or excessive or frequent sand. The infrequent pick-up of these materials may be harmful to your cleaner and will void this warranty.

Accessories and consumables including dust bags and filters, unless defective in manufacture, are not subject to this warranty. In order to prolong the life of accessories and consumables, regular care and maintenance is recommended.

Refer to the instruction manual for further regarding the use and care of your i-Vac Tornado Bagless Vacuum, as misuse or failure to follow the instructions voids this warranty.

In the event of service or advice being needed, or if you would like to make a claim under this warranty, please immediately stop using the i-Vac Tornado Bagless Vacuum and contact Godfreys Commercial, 2 Drake Boulevard Altona, VIC 3018, or on 131 929, Monday-Friday 9am-5pm AEST or commercialsupport@godfreys.com.au.

The decision to repair or replace the cleaner is at the discretion

of Godfreys Commercial depending on the circumstances and requirements of any applicable law. If Godfreys Commercial decide to repair or replace your i-Vac Tornado Bagless Vacuum, it will do so at its own cost. Any transportation costs involved in a claim under this warranty shall be borne by the claimant.

Godfreys Commercial is unable to accept responsibility under this warranty for any repair work not carried out by an authorised Service Agent, or any defect arising from or in connection with the use of non-genuine parts. If any part is no longer available or manufactured, Godfreys Commercial will replace it with a genuine functional replacement part. This warranty does not apply to the cost of replacing any parts of the i-Vac Tornado Bagless Vacuum due to normal wear and tear, alterations, improper installation, physical abuse, misuse or accidental damage.

If proof of purchase cannot be provided at the time of a warranty claim or service, any work carried out on the i-Vac Tornado Bagless Vacuum will be at claimant's cost.

The repair of the i-Vac Tornado Bagless Vacuum under this warranty does not extend the original period of warranty. If your i-Vac Tornado Bagless Vacuum is replaced under this warranty, the replacement will be covered by this warranty for the remainder of the original warranty period. However, you may still have statutory rights after this time.

The benefits conferred by this warranty are in addition to all other rights and remedies in respect of the product as outlined under the Competition and Consumer Act 2010 (Cth) and other State and Territory laws.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.