



WERTHEIM

SLIM

STICK VACUUM WITH
AUTO-EMPTY STATION




WERTHEIM SLIM



WERTHEIM

SLIM

FEATURES

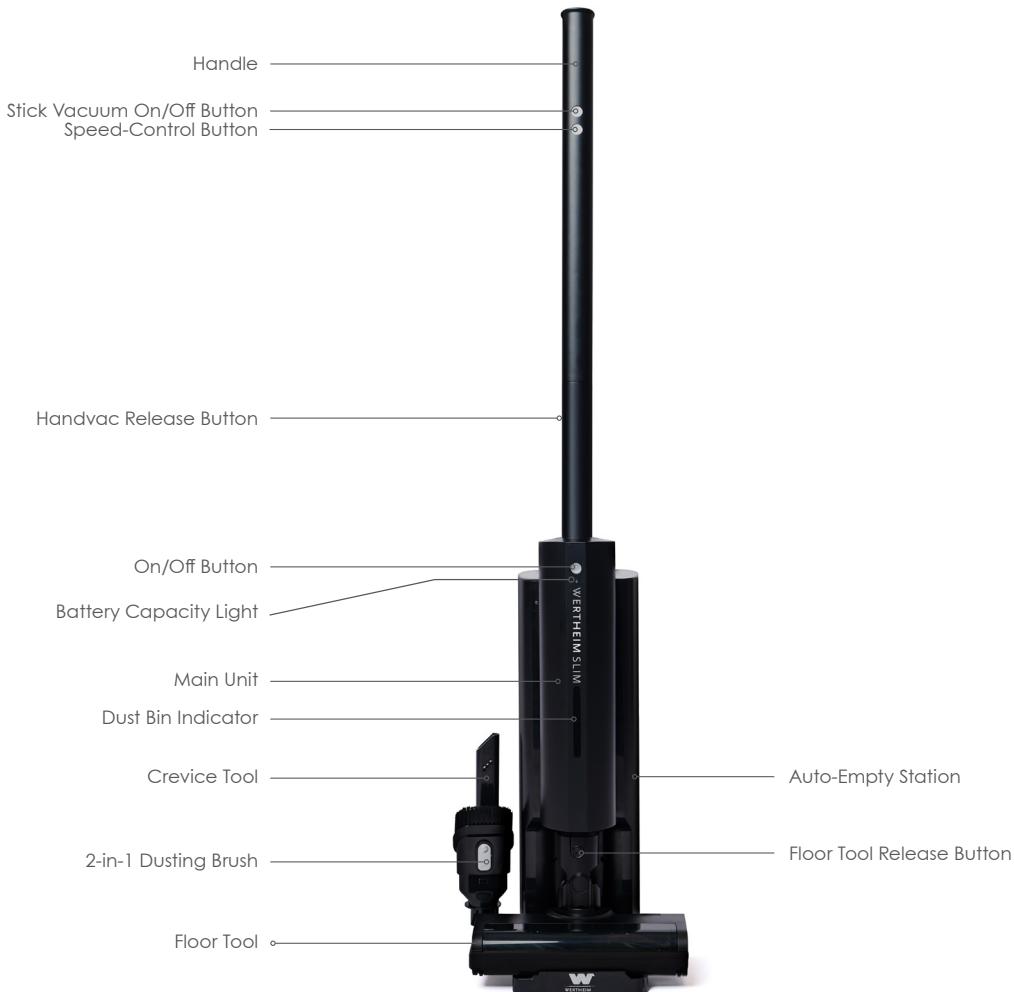

WHAT'S IN THE BOX



Auto-Empty Station



Motorised Low Profile Cleaning Head



Crevice Tool



Synthetic material dust bag x 2



2-in-1
Dusting Brush

SLIM

Please contact Wertheim Customer Service on 131 929 to find your local spare parts provider.



WERTHEIM

Introduction

Congratulations on the purchase of your new Wertheim Slim Vacuum Cleaner. There are many useful features built into your Cleaner. We recommend that you carefully read this instruction manual to take the best advantage of these features.

Specifications

Stick Vacuum Motor Power: 250W Max

Station Input Power: 1000W Max

Battery: 14.4V 2000mAh Lithium-Ion

Dust Bin Capacity: 0.35L

Dust Bag Capacity: 2L

Runtime: Up To 35min*

Stick Vacuum Net Weight: 1.58 Kg

Whole Machine Net Weight: 4.12 kg

Gross Weight: 5.7 Kg

*Runtime is based on low suction power

BEFORE YOU BEGIN

This cleaner must be operated in accordance with these instructions and used only for domestic cleaning to remove dirt and dust from household carpets, flooring, walls and fabrics.

This cleaner is not fit to be used as an industrial cleaner and will void the manufacturer's warranty if used inappropriately.

Please read these instructions thoroughly

This will ensure you obtain full benefit from your new cleaner. Keep this instruction manual in a handy place for future reference.

Important

Always switch off the cleaner before cleaning, when not in use, attempting any maintenance task, fitting or removing accessories. The charging station must only be connected to an ac power supply at the voltage shown on the rating label. This cleaner should only be charged with the charging station provided. This cleaner should only be used for its intended purpose as described in these instructions.

PRECAUTIONARY MEASURES:



1. **Do not** operate the cleaner too close to heaters, radiators or other hot surfaces.



2. Before inserting the plug into the wall, make sure your hands are dry.



3. Before turning on the cleaner, safely remove any large objects from the floor or cleaning surface in order to prevent damage to the brush roller.



4. When you want to remove the plug from the power socket, **do not** use the power cable, gently pull the plug from the power socket.



5. **Do not** use this cleaner to pick-up hot water, flammable and corrosive solvents.
When you use the **hand vacuum** for removing dust, do not use it to pick up water or any liquids

Do not use this cleaner if the battery pack housing and/or the charging base housing is damaged.

SAFETY INSTRUCTIONS



DANGER Live Parts Within

IMPORTANT! Always switch off the wall outlet and remove the plug from the electricity power supply before cleaning your charging base when not in use or attempting any maintenance task. The charging base only be connected to an AC power supply at the voltage shown on the rating label. This cleaner should only be used for its intended purpose as described in this instruction manual. Never operate the cleaner without filters.

When using your vacuum cleaner, basic precautions should always be observed, including the following;

1. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
2. Children should be supervised to ensure that they do not play with the appliance.
3. To prevent electrical shock, do not immerse the appliance, battery, or power plug into water or other liquids.
4. To prevent electrical shock, do not use the vacuum cleaner and the Auto-Empty Station outdoors or on wet surfaces.
5. Always check the power cord before use, the power cord and the plug should be in a good condition and must not be damaged. If the power supply cord is damaged or defective, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
6. The appliance and wall mount bracket are intended for domestic indoors use only.
7. Do not unplug by pulling on the power cord. To unplug, grasp the plug, not the power cord. Use only Australian and New Zealand electrical safety approved extension cords.
8. Avoid running the appliance over the power cable.
9. Do not handle or operate the appliance and the Auto-Empty Station with wet hands and follow electrical safety precautions at all times.
10. Extreme caution should be exercised when using the vacuum cleaner on stairs.

SLIM

11. Do not attempt to change the attachments while the appliance is switched on. Use only manufacturer's recommended accessories.
12. Do not operate the vacuum cleaner too close to heaters, radiators and other hot surfaces.
13. Do not use the appliance including the Auto-Empty Station to pick up flammable items or combustible liquids (i.e. gasoline, hot ashes, cigarettes, matches, explosive materials or anything burning) or use in areas where such substances and items may be present.
14. Do not use the appliance to pick up toxic materials (i.e. chlorine bleach, ammonia).
15. Never operate or use the appliance without the filters in place.
16. Before vacuuming, remove any large or sharp objects from the floor or cleaning surface in order to prevent damage to the filter.
17. If the air inlet or floor head is blocked, switch off the cleaner straight away. Clear the blocked object before attempting to start the vacuum cleaner again.
18. Before carrying out any maintenance service or cleaning the filters, always switch off the vacuum cleaner.
19. Keep openings away from your face and body.
20. Do not use the vacuum cleaner if it is damaged or broken. If connection cables are damaged, have them replaced immediately.
21. Never clean the vacuum cleaner, charging station or any of the electrical parts, especially the electrical connections, with water or liquid cleaners.
22. Never attempt to make any modifications electrically to the vacuum cleaner and Auto-Empty Station.
23. Always store the appliance and Auto-Empty Station indoors in a cool and dry place.
24. Do not pick up water, for dry household use only.
25. Use the electric motorised floor head only for vacuuming dust and dry substances in the home.
26. Never run over the power cable with the motorised floor head as this may cause damage to the power cable.
27. Never touch the roller brush while the vacuum cleaner is switched on.
28. To prevent unnecessary wear on the power head, keep it moving while in operation.
29. Damage caused by improper use or by not observing the instructions in this manual will void the warranty.
30. Ensure the wall outlet is switched off before unplugging the charging base.

Battery Use And Care

1. The appliance is only to be used with the charging base uniquely provided with the appliance.
2. Only use the specifically designated charging base to charge the battery.
3. When appliance is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects that can make a connection from one terminal to another. Shorting the appliance terminals together may cause burns or a fire.
4. Under abusive conditions, battery may catch fire and explode.
5. Do not charge or store the appliance outdoors or inside the car. Only charge or store the battery in a dry indoor area where the temperature is more than 5°C but less than 45°C. The charging base is for indoor used only.
6. Never attempt to open the battery for any reason. If the plastic housing of the battery casing breaks or cracks, immediately discontinue use and do not recharge. Battery is not a serviceable part.
7. The charging function is not a serviceable part.
8. Before disposal of your battery, fully discharge your battery by running the product until it stops.
9. The cleaner contains a Lithium Ion battery. Do not dispose of the appliance with your local garbage. Contact your local council for instructions on how to safely dispose of the battery.
10. Do not use the charging base of the Auto-Empty Station to charge a non-chargeable battery.
11. This appliance contains battery cells that are non-detachable and non-replaceable.
12. Do not handle battery with wet hands.

SLIM

ASSEMBLY

IMPORTANT! Always switch off the vacuum cleaner before fitting or removing accessories.



Main Unit Assembly

1. Attach the floor brush to the main unit. Push them together until you hear a click—that means it's locked in place.
2. Insert the aluminum tube into the main unit. Push until you hear another click to confirm it's secure.



Tip: Give it a gentle tug to make sure all parts are firmly locked before you start cleaning.



Auto-Empty Station Assembly

1. Position the rear tab of the accessory holder under the auto-empty station, then slide the front clip into place until it locks.
2. Attach the crevice tool and dusting brush onto the accessory holder for easy storage.



Use as a Hand Vacuum

1. Press the handvac release button to remove the rod and turn the cleaner into a hand vacuum.
2. To attach an accessory, slide it into the nozzle opening until it clicks into place.
3. To remove the accessory, press the accessory release button and slide it out.



INSTRUCTIONS FOR USE



Turn On the Stick Vacuum

1. Press the On/Off Button on the handle to turn the vacuum on or off.

Tip: Make sure the vacuum is fully charged for best performance.



Switch To Boost Mode

1. Press the Speed-Control Button to toggle between Eco mode (longer run time) and Boost mode (extra power).



Turn On the Hand Vacuum

1. Press the On/Off Button on the front of the hand vacuum to turn it on (starts in Boost mode) or off.

Tip: Ideal for furniture, stairs, and car interiors.



Charging and Dust Collecting

1. Plug the power cord into a wall socket.
2. Slide the main unit onto the dock and press down lightly until it locks in place.
3. The charging indicator will light up, and the dock motor will run for about 22 seconds to transfer dust from the main unit into the dust bag.

NOTE:

1. **Do not remove the main unit while the dock motor is running—this may damage the dust cup door. Wait until the motor stops completely.**
2. **If you accidentally lift the main unit while the motor is running, press it back down and wait for the motor to stop. Then remove the unit. If the dust cup door tilts, reset it manually.**
3. **The vacuum cannot be used while charging.**
4. **Charging and dust collection cannot happen at the same time.**
5. **Always ensure the dust bag, filter assembly, and air outlet cover are installed before using the Auto-Empty Station.**

SLIM



Dust Full Indicator

1. The red dust full indicator will light up when the dock collects too much dust or if the air path is blocked. The dock will run for 3–5 seconds, then stop.
2. If you place the vacuum back on the dock and the red light stays on without starting, empty or replace the dust bag in the dock.
3. If the air path is blocked (for example, in the dust cup or floor brush hose), clear any debris. Once the blockage is removed, the red indicator will turn off and normal operation will resume.



Battery Indicator

1. While charging, the battery indicator flashes red.
2. When charging is complete, the indicator will turn green for 1 minute before switching off.
3. Charging time: around 4 hours.

Lithium-Ion Battery – Important Information

- **Fully charge the battery before first use.**
- **Do not charge the battery below 5 °C or above 40 °C.**
- **The battery indicator on the handheld appliance will flicker when the battery is low during use.**
- **Replace the battery if its performance significantly decreases or charging time increases.**

ACCESSORIES



2-in-1 Dusting Brush

- Soft dusting brush – gently cleans delicate surfaces.
- Upholstery tool – effectively cleans furniture, cushions, and fabric surfaces.



Crevice Tool

The crevice tool is perfect for cleaning tight spaces and hard-to-reach areas, such as corners, edges, and between furniture.

SLIM

MAINTENANCE



IMPORTANT!

Before cleaning the Auto-Empty Station, make sure to turn off the vacuum, unplug the power cord of the auto empty station from the wall socket. Always ensure the station is unplugged to avoid the risk of electric shock.



Replacing The Auto-Empty Station Dust Bag

1. Open the top cover of the Auto-Empty Station.
2. Pull up the collar of the dust bag.
3. Align the collar with the limiting slot of the station and push it down to install a new dust bag.

Attention:

- Replace the dust bag promptly when the Dust Full indicator flashes red.
- If the indicator continues to flash after replacing the bag, check for clogs in the elbow tube and filter, and clean the inside of the elbow if needed.



Replacing the Filter of the Auto-Empty Station

1. Remove the sponge filter from the bottom of the dust bin.
2. Install a new filter assembly in its place, ensuring it is properly seated.

Note: Clean the filters every 3 months and make sure they are completely dry before reinstalling and using the vacuum.



Cleaning the HEPA Filter of Auto-Empty Station

1. Pull out the air outlet grill.
2. Take out the HEPA filter. Tap the filter gently to remove dust, or rinse with water if needed.
3. Make sure the filter is **completely dry** before reinstalling, or replace with a new HEPA filter and closing the grille.



Note: The filters should be cleaned every 3 months and must be completely dried before installation and use.

SLIM



Cleaning The Dust Cup and Filters

Important: Always switch off the vacuum before performing maintenance. To maintain suction power, regularly clean the dust cup.



1. Press the dust bin release button to remove the dust cup assembly.
2. Pull out the mesh filter and empty any remaining dust from the dust bin into the trash.
3. Hold the mesh filter with one hand and turn it anti-clockwise to unlock and remove the HEPA filter.
4. Tap the filter gently to remove dust, or rinse it with water if necessary. Make sure the filter is completely dry before reinstalling, or replace it with a new HEPA filter if needed.

Note: Clean the HEPA filter every 3 months or when airflow decreases to maintain suction power.



Cleaning The Motorised Floor Head

1. Press the floor head release button to remove the floor head from the main unit.
2. Press the roller brush release button to unlock and remove the roller brush.
3. Gently pull out the roller brush to clean or replace it.

Tip: Remove hair and debris regularly to keep the brush spinning freely and maintain suction performance.



Safety Precautions:

- Keep hair, hands, and feet away from the rotating brush while it is running.
- Do not run the motorised brush over electric cables or string.
- Do not use the motorised brush on pets.
- If children are nearby, turn off the vacuum when leaving the motorised brush unattended.
- Do not attempt to service or unclog the motorised brush while the vacuum is running.
- The motorised brush operates automatically when connected to the vacuum cleaner.

Note: If the brush roller becomes jammed, the motor will switch off automatically. In this case, switch off the vacuum cleaner, remove any obstructions, and switch it on again. If the power head does not start after clearing the blockage, do not attempt to dismantle the motorised floor head.

TROUBLESHOOTING

Problems and Solutions

Please contact Godfreys Commercial Customer Support on 131 929 to find your local spare parts provider.

Fault	Cause	Solution
3 indicators flash	Airflow blockage in the vacuum head elbow, tube or vacuum cleaner inlet Too high or too low use ambient temperature	Check and remove blockages Please ensure to operate the vacuum cleaner at home ambient temperature
Electric floor brush does not work	Rolling brush entangled in hair, etc.	Remove hairs wrapped around rolling brush
Running time becomes shorter	Battery ages Battery not fully charged	Contact the seller or after-sales service personnel to purchase a new battery Charge the vacuum cleaner
Suction loss	Excessive dust in dust cup Dust cup HEPA filter clogged Floor brush or accessory suction inlets clogged	Clean dust cup on vacuum cleaner Clean vacuum cleaner HEPA filter Remove blockage

Fault	Cause	Solution
Unable to charge	Too low or too high ambient temperature when charging	Charge the vacuum cleaner in an environment with proper temperature (5°C-40°C)
The inlet of the Auto-Empty Station is blocked	There is dust or debris inside the Auto-Empty Station suction inlet	For details on cleaning the Auto-Empty Station suction inlet, refer to "Cleaning the Auto-Empty Station Inlet "
Poor self emptying	Bag full	Replace new dust bag

SPARE PARTS

Part	Part Number
Powerhead	11400226
Dust Bin Assy	33158690
Hand Vacuum Assy	33158691
Filter Kit with Exhaust Grill	32201968
Motor	33301089
Brush Roller	33788306
Empty Station Synthetic Bag 5pk	32440612



*Two years warranty on parts and labour excluding the battery which has a one year warranty.

Your Wertheim cleaner, in the case of domestic use, has a two years warranty against product defects and failures when the product is used in accordance with the terms and conditions of this warranty statement.

This warranty is provided by Future Innovation Holdings Pty Ltd Trading as Godfreys Commercial ABN 98 677 632 021. This warranty commences from the original date of purchase and is not transferable. You are required to retain your original proof of purchase for any claims under this warranty. This warranty is valid only in the country where the cleaner is purchased.

Your Wertheim cleaner must be operated in accordance with these instructions and used only for domestic household cleaning to remove dry dirt and dust from household carpets, flooring and fabrics. Your Wertheim cleaner is not fit to be used as an industrial cleaner, and is not designed for the collection of vitreous building material including particle board, construction products and similar products such as wood/ fibres, cement, fillers, fibre glass etc or excessive or frequent sand. The infrequent pick-up of these materials may be harmful to your cleaner and will void this warranty.

Accessories and consumables including dust bags, brush roller and filters, unless defective in manufacture, are not subject to this warranty. In order to prolong the life of accessories and consumables, regular care and maintenance is recommended.

Refer to the instruction manual for further regarding the use and care of your Wertheim cleaner, as misuse or failure to follow the instructions voids this warranty.

In the event of service or advice being needed, or if you would like to make a claim under this warranty, please immediately stop using the Wertheim cleaner and contact Godfreys

Commercial, 2 Drake Boulevard Altona, VIC 3018, or on 131 929, Monday-Friday 9am-5pm AEST or commercialsupport@godfreys.com.au.

The decision to repair or replace the cleaner is at the discretion of Godfreys Commercial depending on the circumstances and requirements of any applicable law. If Godfreys Commercial decide to repair or replace your Wertheim cleaner, it will do so at its own cost. Any transportation costs involved in a claim under this warranty shall be borne by the claimant.

Godfreys Commercial is unable to accept responsibility under this warranty for any repair work not carried out by an authorised Service Agent, or any defect arising from or in connection with the use of non-genuine parts. If any part is no longer available or manufactured, Godfreys Commercial will replace it with a genuine functional replacement part. This warranty does not apply to the cost of replacing any parts of the Wertheim cleaner due to normal wear and tear, alterations, improper installation, physical abuse, misuse or accidental damage.

If proof of purchase cannot be provided at the time of a warranty claim or service, any work carried out on the Wertheim cleaner will be at claimant's cost.

The repair of the Wertheim cleaner under this warranty does not extend the original period of warranty. If your Wertheim cleaner is replaced under this warranty, the replacement will be covered by this warranty for the remainder of the original warranty period. However, you may still have statutory rights after this time.

The benefits conferred by this warranty are in addition to all other rights and remedies in respect of the product as outlined under the Competition and Consumer Act 2010 (Cth) and other State and Territory laws.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

SLIM

Future Innovation Holdings Pty. Ltd.
trading as Godfreys Commercial
ABN: 98 677 632 021
2 Drake Boulevard Altona, Victoria 3018

Customer Support:

131 929

www.godfreys.com.au

commercialsupport@godfreys.com.au

Wertheim® is a registered trademark.