



SpotMate Spot Cleaner

Compact & lightweight

Removes spots & stains

Self-clean nozzle included





9



10



11



SpotMate Spot Cleaner

Congratulations on the purchase of your new i-Vac spot cleaner. There are many useful features built into your spot cleaner. We recommend that you carefully read this instruction manual so you can make the most of all the features this machine has to offer.

Features:

- | | |
|---------------------|------------------------|
| 1. On/off Button | 5. Hose Handle |
| 2. Handle | 6. Hose Anchor Hook |
| 3. Dirty Water Tank | 7. Hose |
| 4. Clean Water Tank | 8. Water Spray Trigger |

Accessories:

- | | |
|----------------------|-----------------------|
| 9. Self-Clean Nozzle | 11. Tough Stain Brush |
| 10. Upholstery Tool | |

Specification:

Voltage: 220-240V~50/60 Hz
Power: 330W
Suction: 9kpa
Noise level: 82dBA Max
Cord length: 3m

Clean water tank: 800ml
Dirty water tank: 500ml
Hose length: 1.2m
Net Weight: 2.5Kg
Gross Weight: 3.2Kg

Please contact i-Vac Customer Service on 131 929 to find your local spare parts provider.

Before You Begin

Please read these instructions thoroughly

This will ensure you obtain full benefit from your new cleaner. Keep this instruction manual in a handy place for future reference.

Important

Always switch off the cleaner and remove the plug from the electricity power supply before cleaning your appliance when attempting any maintenance task. The cleaner must only be connected to an AC supply at the voltage shown on the rating plate. This cleaner should only be used for its intended purpose as described in these instructions.

Precautionary measures:



1. Do not operate the spot cleaner too close to heaters, radiators or other hot surfaces.



2. Before inserting the power plug into the power supply, make sure your hands are dry.



3. When you want to pull the plug from the wall, do not use the power cable, gently pull the plug from the power socket.



BEFORE YOU CLEAN, TEST FIRST

Before cleaning the carpet, test for colour fastness.

Dampen a white cloth with solution. Test a small area of carpet in a closet. Gently rub the cloth over the carpet. Check each colour for colour bleeding. If the cloth remains clean, it should be safe to clean the carpet.

Safety Precautions & Warnings



IMPORTANT! Always switch off the wall outlet and the cleaner before cleaning your appliance, when not in use or attempting any maintenance task. The cleaner must only be connected to an AC power supply at the voltage shown on the rating label. This Spot Cleaner should only be used for its intended purpose as described in this instruction manual. Never operate the cleaner without Dirty Water Tank.

When using your vacuum cleaner, basic precautions should always be observed, including the following;

1. This appliance is **not** intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
2. Children should be supervised to ensure that they **do not** play with the appliance.
3. Always check the power cord before use. The power cord and plug should be in a good condition and must **not** be damaged or defective. If the power cord is damaged it must be replaced by an authorised service agent or similarly qualified persons.
4. Carpets should be dry vacuumed thoroughly before washing. Use a vacuum cleaner with a power brush for best results.
5. If using an extension cord please make sure that it is of an approved type and that it is fully extended. Failure to do so could cause your cleaner to overheat and damage it.
6. **Do not** run the appliance over the power cable and power socket on the floor.
7. **Do not** place cleaner on stairs or furniture, as it may result in injury or damage. **Do not** handle the plug or spot cleaner with wet hands.
8. **Do not** put any objects into the openings or operate with the openings blocked. Keep them free of anything that may reduce air flow.
9. Keep hair, loose clothing, fingers and all parts of the body away from openings and moving parts.
10. **Do not** use this cleaner and accessories on hard floors. Using this machine on hard floors may scratch or damage your floor.
11. **Do not** use the spot cleaner on any glowing, burning or smoking particles.
12. **Do not** use without the solution tank and dirty water tank in place.
13. Turn off all controls before unplugging.
14. **Do not** store cleaner with solution in tanks.
15. Do not use to pick up flammable or combustible liquids such as petrol or use in areas where they may be present.
16. Recommended to use the spot cleaning solution provided by Godfreys.
17. **Do not** use any high-foaming solutions as an excessive amount of foam impairs the functioning of the spot cleaner. If unsuitable

cleaning solutions are used, this will void warranty.

18. **Do not** pull or carry the appliance by the power cable, use the power cable as a handle or pull the power cable around edges or corners.
19. To prevent electrical shock, **do not** immerse the appliance, power cord or power plug into water or any other liquids.
20. **Never** clean any of the electrical parts, especially the electrical connections with water or liquid cleaners.
21. Never attempt to make any modifications to the spot cleaner.
22. Indoor use only.
23. Always store the appliance indoors, in a cool, dry place.
24. **Do not** use the appliance if it is damaged or breaks down. Check the electrical components regularly for defects.
25. If the Spot Cleaner is leaking from the base, turn off the machine, disconnect the power and please return to the point of purchase.

CHECK FOR COLOUR FASTNESS!

Before cleaning the carpet, test for colour fastness. Dampen a white cloth with solution. Test a small area of carpet in a closet. Gently rub the cloth over the carpet. Check each colour for colour bleeding. If the cloth remains clean, it should be safe to clean the carpet.

NOTE:


1. For heavily soiled areas, additional applications may be necessary.
2. For optimal cleaning, allow plenty of time for the

cleaned area to dry thoroughly.

3. After carpet is thoroughly dry, vacuum the carpet using a vacuum cleaner with a powerbrush.
4. To reduce the risk of a leaking condition, **do not** store machine where freezing may occur. Damage to internal components may result.
5. Use extra care when cleaning on stairs.
6. **Do not** overwet surface. Use only on surface moistened by the cleaning process.

Assembly


IMPORTANT! Always switch off the wall outlet and the cleaner before cleaning your appliance, when not in use or attempting any maintenance task.

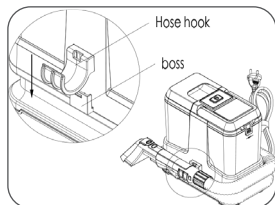

1. Insert the hose anchor hook into the holder on the machine.



2. Lift the handle and pull the clean water tank upward to remove it from the machine. Remove the Clean Water Tank from the machine.

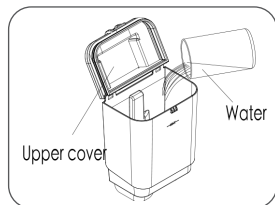


3. Pour water into the Clean Water Tank after opening the upper cover, then close the top cover and lock it.

ATTENTION:


1. To avoid leaking, please lock the top cover tightly.
2. Maximum water capacity is 0.8 L.
3. Please pour away the remaining water after use to avoid mildew.

Assembly

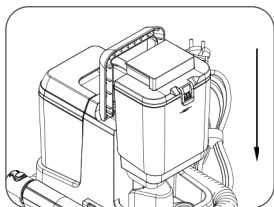


4. Install the Clean Water Tank on the machine.

ATTENTION: Don't shake the Clean Water Tank during installation.

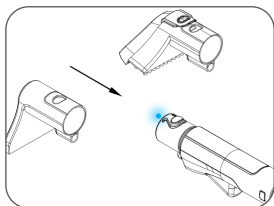


5. Connect the accessory to the hose handle.

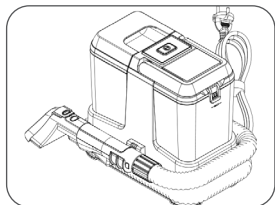


6. Please fix the hose and power cord before moving the machine.

Instructions For Use


WARNING! Do not use hot or boiling water to fill the water tank. Only refill the water tank with cold tap water.

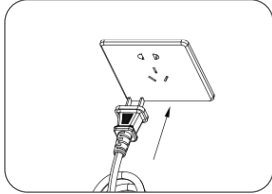


1. Please insert the plug into the socket.

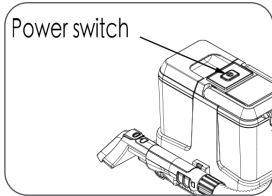


2. Turn on the power to start the machine.

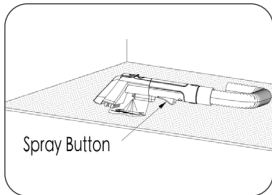


3. Press the Water Spray Trigger on the hose handle to release clean water onto the stain, wetting the surface of the blanket or cloth.

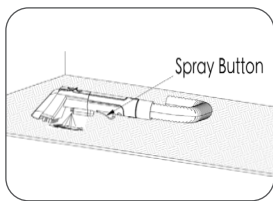


4. To clean and spray, move the tough stain brush over the stain while spraying water and simultaneously extracting the dirty water, bringing it forward and sucking it up.

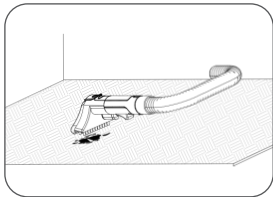


5. To remove the dirty water, release the spray trigger and move the tough stain brush over the area to vacuum it up. Be sure to dry the cloth or blanket thoroughly afterward to prevent mildew.

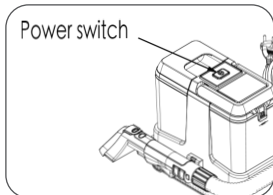

6. Turn off the power, and the machine will stop working.

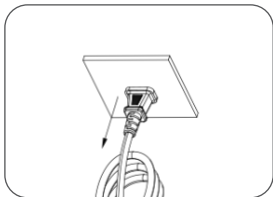


7. Unplug the power cord from the socket.

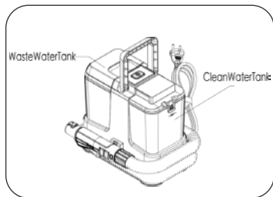


8. Clean the Dirty Water Tank and Clean Water Tank.

Instructions For Use

IMPORTANT! For stubborn dirt, it is better to apply Cleaning Solutions to the carpet before cleaning or brushing.

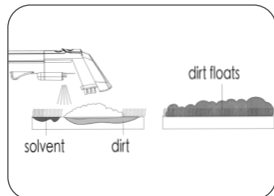


1. For optimal results, apply spot cleaning solutions on the stain.

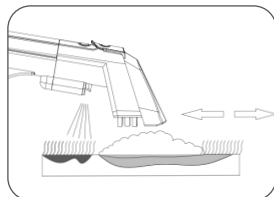


2. Apply downward pressure on cleaning tool and pull it toward you. The suction will remove the dirt and dirty water. Repeat this step as often as necessary to remove as much liquid/ moisture as possible

ATTENTION: Absorb the dirt/sewage and do not leave any solvent on or in the carpet.

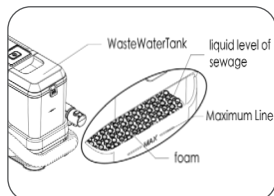


ATTENTION: To prevent water from entering the machine, stop operating immediately and clean the Dirty Water Tank when the liquid level (including foam) exceeds the MAX line shown in the figure below.

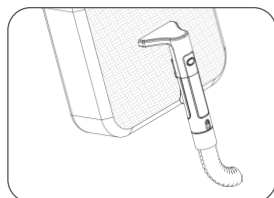


Using for Upholstery Tool

Place the upholstery tool on the surface of the cushion and move it up and down (from front to back).

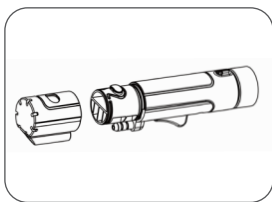

Using for Self-Clean Nozzle

1. Remove any attachments from the hose and place the self-clean
2. Turn the unit on and hold the water trigger button for a minute so that water is cycled through the hose.

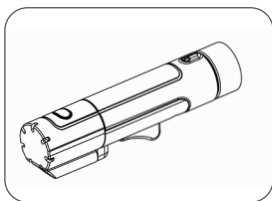


ATTENTION:

1. Always ensure the cleaning solution does not damage the carpet before use. When using detergent, test on a small hidden area first to ensure no discoloration.
2. Do not use diluents, aniline, chloroform, or flammable solvents.
3. Do not spray liquids such as insecticides, haircare products, or lubricating oils.
4. Do not use the product to vacuum flammable or combustible substances (like kerosene, gasoline, thinner, copier toner, etc.).
5. Do not use it to vacuum oil, smoke, or steam.
6. Do not use it for vacuum dry dust.
7. Do not operate the unit near combustible materials such as lit cigarettes or incense to avoid fire risk.
8. Only water below 40 °C should be poured into the Clean Water Tank.


Maintenance

Clean up the Dirty Water Tank

IMPORTANT! Always switch off the wall outlet and the cleaner before cleaning your appliance, when not in use or attempting any maintenance task.

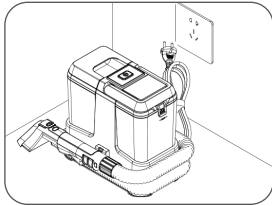


1. Switch off the machine and unplug the power cord from the socket.

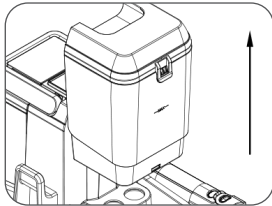


2. Remove the Dirty Water Tank from the machine as shown by the arrow in the figure below.

ATTENTION: To avoid overflowing, do not tilt or shake the Dirty water tank while moving.

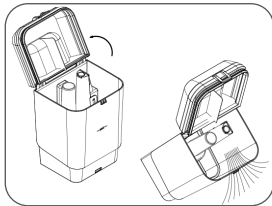


3. Tilt the Dirty water tank after removing the top cover and pour the dirty water out.

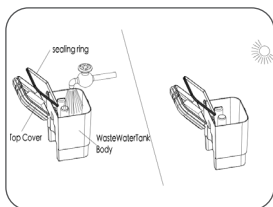


4. Cleaning the Dirty water tank body, top cover and sealing ring.

ATTENTION: To avoid bacteria or unpleasant smells, please clean the Dirty water tank body (and related parts) promptly and dry them after cleaning.

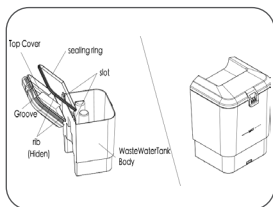


5. To assemble the Dirty water tank, first insert the sealing ring into the groove of the top cover. Then, insert the rib on the top cover into the slot of the tank body and rotate the top cover until you hear a clear “click” sound, indicating the assembly is complete.

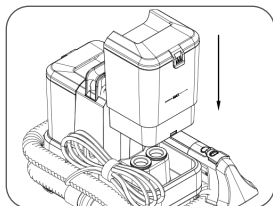

6. To load the Dirty water tank, insert it into the machine following the direction indicated by the arrow, then press it firmly into place.


ATTENTION: To avoid liquid leakage or issues during use, please do not shake the Dirty water tank while assembling.

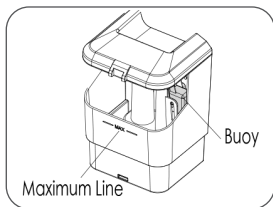


ATTENTION:

1. If the machine continues running when sewage level is above the MAX line, stop it immediately. Suction power will reduce or be lost because of the floater action. It is normal for a little water to remain in the hose.
2. Stop the machine immediately and clean and dry any water inside the body, hose, and tank if water enters the machine.


Clean up the Clean Water Tank

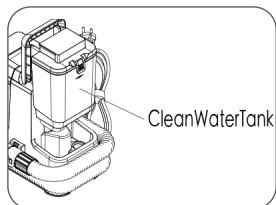


1. Remove the Clean Water Tank from the machine.

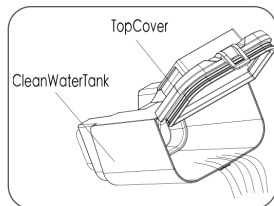


2. Pour out any remaining water in the Clean Water Tank after opening the Top Cover.

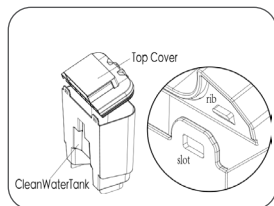


3. Insert the rib on the Top Cover into the slot in the Clean Water Tank and rotate the Top Cover. Assembly is complete when you hear a clear click.

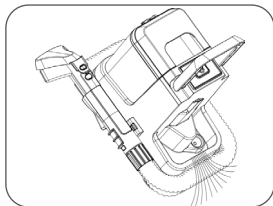

4. Pour any remaining water from the body by tilting the machine and wipe with a cloth if needed.

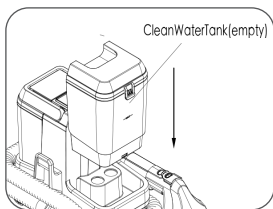

5. To use the machine, insert the empty Clean Water Tank into the machine body and press it firmly as shown by the arrow in the figure below.

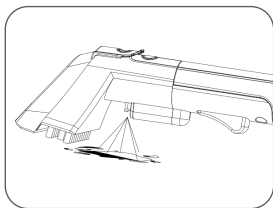


6. To avoid mildew, switch on the power to start the machine, press the spray button on the hose handle, and spray out any water left inside the hose, Clean Water Tank, or machine.


ATTENTION:

1. **Stop running and unplug the power cord before performing maintenance.**
2. **To avoid electric shock, do not immerse the machine in water or expose it to rain during maintenance.**
3. **Do not use detergent, diluent, benzene, or other chemical agents to clean the machine.**

Clean up the tank/Tough Stain Brush (after use)

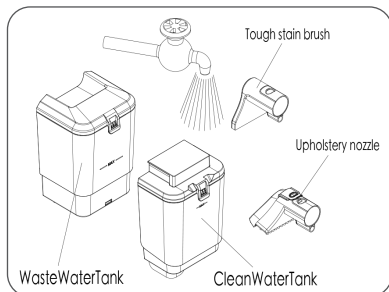


Remove them from the machine, wash thoroughly, and let them air dry (do not place in direct sunlight).

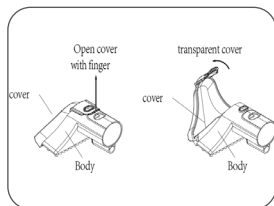


Disassembling the Tough Stain Brush:

Lift the transparent cover of the Tough Stain Brush upward with your finger to open it.

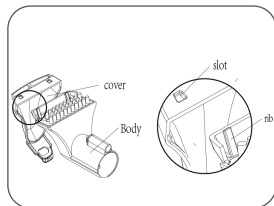


Assembling the Tough Stain Brush:

1. Insert the rib in the body into the slot in the cover.
2. Rotate the cover until you hear a "click" to complete assembly.

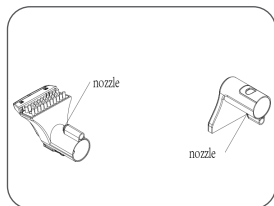


Cleaning the nozzle:

Clean the nozzle immediately with a pin or needle if it becomes clogged.

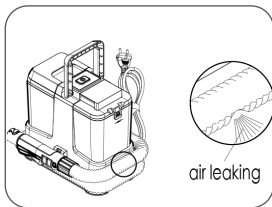

Checking the hose:

Check the hose regularly for holes or other damage.

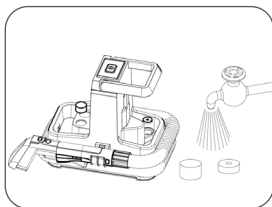

Cleaning the inlet air sponge/filter sponge:

The inlet air sponge and filter sponge are consumables that need to be cleaned or washed regularly. Replace them in time if necessary.

ATTENTION:

1. **Air dry all parts after washing.**
2. **All parts must be reinstalled in the machine after maintenance.**
3. **Store the machine at normal temperature in a dry place, away from direct sunlight after maintenance.**

Spare Parts

Part	Part Number
Upholstery Tool	31155836
Tough Stain Brush	31155835
Dirty Water Tank Assy	33158685
Clean Water Tank Assy	33158686
Self-Clean Nozzle	31155837
Hose Anchor Hook	33158687

Troubleshooting

Problems and solutions

Please contact Godfreys Commercial Customer Support on 131 929 to find your local spare parts provider.

Fault	Cause	Solution
Working abnormally	Poor contact due to loose plug or incorrect insertion. Dirty water tank is full; prevents operation. Hose is abnormal.	Turn off the power, unplug the cord from the socket, and replug. Call customer service. Turn on the switch as per manual. Clean the Dirty water tank and reuse. Check if hose is damaged, bent, or cracked.
No water or low spray from nozzle	Clean Water Tank installed incorrectly. Inlet air sponge is blocked.	Install correctly as per manual. Clean or replace the sponge.

Notes



SpotMate Spot Cleaner

Conditions of warranty

Your i-Vac SpotMate Spot Cleaner, in the case of domestic use, has a one year warranty against product defects and failures when the product is used in accordance with the terms and conditions of this warranty statement.

This warranty is provided by Future Innovation Holdings Pty Ltd Trading as Godfreys Commercial ABN 98 677 632 021. This warranty commences from the original date of purchase and is not transferable. You are required to retain your original proof of purchase for any claims under this warranty. This warranty is valid only in the country where the cleaner is purchased.

Your i-Vac SpotMate Spot Cleaner must be operated in accordance with these instructions and used only for domestic household cleaning to remove stains and spills from carpets and upholstery. Your i-Vac SpotMate Spot Cleaner is not fit to be used as an industrial cleaner, and is not designed for collecting building materials such as wood fibres, cement, or dust from construction sites. Use in such environments may damage the cleaner and will void this warranty.

Accessories and consumables including filters, unless defective in manufacture, are not subject to this warranty. In order to prolong the life of accessories and consumables, regular care and maintenance is recommended.

Refer to the instruction manual for further information regarding the use and care of your i-Vac SpotMate Spot Cleaner, as misuse or failure to follow the instructions voids this warranty.

In the event of service or advice being needed, or if you would like to make a claim under this warranty, please immediately stop using the i-Vac SpotMate Spot Cleaner and contact Godfreys Commercial, 2 Drake Boulevard Altona, VIC 3018, or on 131 929, Monday-Friday 9am-5pm AEST or commercialsupport@godfreys.com.au

The decision to repair or replace the cleaner is at the discretion of Godfreys Commercial depending on the circumstances and requirements of any applicable law. If Godfreys Commercial decide to repair or replace your i-Vac SpotMate Spot Cleaner, it

will do so at its own cost. Any transportation costs involved in a claim under this warranty shall be borne by the claimant.

Godfreys Commercial is unable to accept responsibility under this warranty for any repair work not carried out by an authorised Service Agent, or any defect arising from or in connection with the use of non-genuine parts. If any part is no longer available or manufactured, Godfreys Commercial will replace it with a genuine functional replacement part. This warranty does not apply to the cost of replacing any parts of the i-Vac SpotMate Spot Cleaner due to normal wear and tear, alterations, improper installation, physical abuse, misuse or accidental damage.

If proof of purchase cannot be provided at the time of a warranty claim or service, any work carried out on the i-Vac SpotMate Spot Cleaner will be at the claimant's cost.

The repair of the i-Vac SpotMate Spot Cleaner under this warranty does not extend the original period of warranty. If your i-Vac SpotMate Spot Cleaner is replaced under this warranty, the replacement will be covered by this warranty for the remainder of the original warranty period. However, you may still have statutory rights after this time.

The benefits conferred by this warranty are in addition to all other rights and remedies in respect of the product as outlined under the Competition and Consumer Act 2010 (Cth) and other State and Territory laws.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.