

Origin.



IDEAL FOR:

-  Shopping Centres
-  Supermarkets
-  Hospitals
-  Schools

VITESSE 1800B
**HIGH-SPEED BATTERY
VACUUM BURNISHER**

IMPORTANT



Always switch off the cleaner and remove the plug from the electricity power supply before cleaning your appliance, when not in use. The cleaner must only be connected to an AC power supply at the voltage shown on the rating label. This cleaner should only be used for its intended purpose as described in this instruction manual.

Never operate the vacuum cleaner without filters.

BEFORE YOU BEGIN

- Do not short-circuit the supply terminals.
- Never clean the machine, charger or any of the electrical parts, especially the electrical connections with water or liquid cleaners.
- Never attempt to make any modifications electrically to the machine and charger.
- Always store the machine and charger indoors in a cool and dry place.
- Do not pick up water, for dry indoor use only.
- Damage caused by improper use or by not observing the instructions in this manual will void the warranty.



1. **Do not** operate the burnisher too close to heaters, radiators, cigarette butts etc.



2. Before you insert the charging plug into the Mains power supply, make sure your hand is dry.



3. Before you start using the burnisher, remove large or sharp objects from the floor to prevent damage to the pad.



4. When you remove the plug from the Mains power supply, please do this at the plug itself and not by the electrical cable.



5. **Do not** use the burnisher on wet surfaces.

SAFETY PRECAUTIONS AND WARNING

Make sure this manual is read and understood by the operator. Only trained operators should operate this machine once they are familiar with the adjustments and correct method. When using this machine, basic safety precautions should always be observed, including the following. **READ ALL INSTRUCTIONS BEFORE USE.**

- Read the labels on the machine carefully. Do not cover them for any reason and replace them immediately if they become damaged.
- **CAREFULLY** read the instructions before starting the machine or performing maintenance.
- The machine must be used exclusively by authorised, trained personnel.
- Do not use the machine for purposes other than the intended use.
- Always make sure that the work surfaces, floors and ramps, are able to withstand the weight of the machine.
- During the working of the machine, pay attention to other people and especially to children.
- The machine is not suitable for cleaning carpets or textile floors.
- Avoid damaging the machine by crushing or bending it, or by applying stress.
- Do not place any liquid containers on the machine.
- The storage temperature must be between 0°C and +55°C; do not store outdoors in damp conditions.
- Conditions of use: room temperature between 0°C and 40°C with relative humidity between 30 and 95%.
- Only use the machine in closed areas and do not expose it directly to rain.
- Polishing operations should only be carried out in areas where the passage of unauthorised persons is prohibited. Signal the presence of work areas with suitable signs.
- Do not use the machine in an explosive atmosphere.
- Avoid working with the brushes when the machine is standing still, so as not to damage the floor.
- In the event of a fire, use a powder extinguisher. Do not use water.
- Do not knock against shelving or scaffolding, where there is a danger of falling objects. The operator must always be equipped with the appropriate safety device (gloves, shoes, helmet, glasses, etc.)
- If the machine does not work properly, check this is not caused by failure to carry out routine maintenance. Otherwise, request the intervention of the Origin technical assistance centre.
- If you need to replace any components, request the **ORIGINAL** spare parts from a Origin dealer and/or Authorised Retailer.
- For all maintenance interventions, switch off the machine and remove the battery.
- Do not remove any protection devices which require the use of tools in order to be removed.
- Do not wash the machine with direct water jets or with pressurised water, nor with corrosive substances.
- Have the machine checked by a Origin technical assistance centre every year.
- Do not put your hands into the machine during operation.
- Do not remove the covers and/or guards when the machine is running.
- Do not approach the machine with clothes that can get entangled, **AVOID** the use of scarves, shawls, wraps and loose clothing.
- Avoid working over pieces of rope, wire,

SAFETY PRECAUTIONS AND WARNING:

cables: these can be caught in the brush and create friction.

- Before using the machine, check that all the hatches and covers are positioned as shown in this Use and Maintenance Manual.
- When disposing of consumption materials, observe the laws and regulations in force.
- The machine is not suitable for use by children or people with reduced physical, mental and sensorial capacities, or people lacking experience and knowledge, unless supervised and instructed in the use of the machine by a person responsible for their safety.
- Children must be supervised to ensure they do not play with the device.
- Never attempt to open the battery for any reason. If the plastic housing of the battery breaks or cracks, immediately discontinue use and do not recharge.
- The charger contains electrical connections inside. The charger is not a serviceable part.
- Before disposal of your battery, fully discharge your battery by running the product until it stops.
- The machine contains a Li-Ion battery. Do not dispose the machine with your local garbage. Contact your local council for the instruction of disposal of the battery.
- Do not use the charger to charge a non-chargeable battery.
- Do not touch or insert objects into the battery pack or charger terminals. Do not attempt to short circuit the battery pack or charger terminals.

Battery use and care

- The machine is only to be used with the charger uniquely provided with the machine.
- Only use the ST3 charger to charge the battery.
- When the machine and charger are not in use, keep them away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects that can make a connection from one terminal to another. Shorting the battery terminals or terminals on the charger may cause burns or a fire.
- Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.
- Do not charge or store the machine outdoors or inside the car. Only charge or store the battery in a dry indoor area where the temperature is more than 5°C but less than 45°C.
- Only use the batteries provided with the machine.
- If the machine is to be stored unused for a long period of time, please remove the battery from the machine.
- If the battery is faulty, do not leave the battery in the machine. Remove the battery from the machine and safely dispose of the battery.

KNOW YOUR PRODUCT





SPECIFICATION

Specifications:

Motor: 900W DC Direct Drive

Voltage: 24V

Battery: Lithium-Ion, 58Ah, with BMS

Burnishing Speed: Fixed 1800 RPM

Pad Size: 525mm (21-inch nominal)

Runtime: Up to 3.5 hours

Charging Time: Approximately 9 hours

Handle: Fully Adjustable

Pad Pressure: Adjustable


Dust Collection: Sealed Passive Vacuum

Wheels: 150mm Non-Marking

Net Weight: 52kg

GETTING STARTED

ALWAYS SWITCH OFF, REMOVE THE KEY AND DISCONNECT THE BATTERY BEFORE INSPECTING THE PAD OR PERFORMING MAINTENANCE.

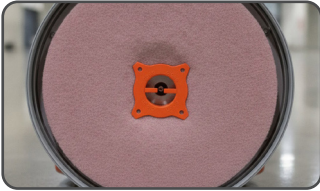

1. Inspect the Burnishing Pad

Switch off, remove the key and disconnect the battery. Check that the clean, dry 525mm pad is centred, secure and undamaged. See page 12 for pad care.



2. Check the Dust System

Fit the dust bag and filter correctly. Check the lid seal, hose and skirt for damage or blockage. Never operate without the dust system assembled.



3. Check the Battery Connection

With the key OFF, check the battery lead and plug for damage. Ensure the plug is fully seated and locked. Keep the charging cable disconnected during use.



4. Check Controls and Work Area

Check the levers return freely and the handle is locked. Keep the key OFF until ready. Confirm the floor is clean and dry and people are clear.

SET UP THE CONTROLS



1. Adjust the Handle

With power OFF, support the handle and release the cam lever. Set a comfortable height, around waist level, then lock the lever. Do not overtighten.



2. Set Initial Pad Pressure

Start with low pad pressure. Use the INCREASE and DECREASE markings on the front knob. Confirm the pad and skirt sit correctly before starting.



3. Check the Battery Display

Turn the key ON with the levers released. Check the battery-level display. For a stable reading, stop the pad and allow a few seconds for the display to settle.



4. Identify the Start Controls

Locate the safety lockout buttons and operating levers. Stand behind the machine with both hands on the grips before starting. Never bypass the safety controls.

BURNISHING

Starting the Machine

Use only on a clean, dry, compatible finished floor. The Vitesse 1800B operates at a fixed speed; select a pad suitable for high-speed burnishing.



1. Position and Start

Keep the pad flat on the floor. Turn the key ON. Press the safety lockout buttons, then squeeze an operating lever. Hold the handle securely as the pad starts.



2. Burnish in Straight Passes

Guide the machine at a steady pace in overlapping passes. Keep the rotating pad moving. Do not force the machine or leave it running in one place.



3. Stop and Reposition

Release the operating levers and wait for the pad to stop. Stop before crossing thresholds or obstacles. When finished, switch OFF and remove the key.

If the pad marks the floor, the motor slows or the machine vibrates, stop immediately. Isolate the battery and check the pad and floor before restarting.

ADJUSTING PAD PRESSURE



1. Begin with Low Pressure

Start with low pressure and make a short test pass. Allow a new pad to settle before increasing pressure. Check the finish before proceeding.




2. Adjust in Small Steps

Stop the pad before reaching down to the knob. Turn toward INCREASE or DECREASE as marked. Restart and check the result after each small adjustment.



3. Read the Pressure Gauge

The pad-pressure gauge is read while the pad is running. Use the lowest effective pressure. Reduce it if the motor labours or the machine is hard to guide.

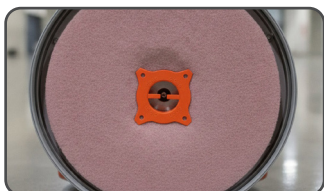

4. Recheck the Pad and Floor

A dirty, worn or unsuitable pad can cause drag and poor results. Switch off and isolate the battery before inspecting or changing the pad.

Do not compensate for a worn or contaminated pad by adding pressure. Pad pressure, floor finish and battery condition affect runtime.

BATTERY & CHARGING



Battery Protection (BMS)

The battery includes a Battery Management System. If it does not wake after storage, check charge and connections. Do not repeatedly reset a fault. Ask your supplier for the approved reset procedure.



Charging the Battery

1. Switch OFF and remove the key. Let a hot battery cool.
2. With charger mains power OFF, connect the approved charger to the charging socket shown.
3. Connect to the supply specified on the charger label and switch on.



4. Complete Charging

Allow approximately 9 hours for a full charge. Follow the charger's completion indicator and instructions; do not rely on time alone. Switch off and unplug mains power before disconnecting the charging plug.

Charge in a dry, ventilated area on a non-flammable surface. Keep the charger uncovered and away from exits. Monitor charging and disconnect when complete. Use only the charger approved for this battery.

DUST CONTROL & PAD CARE



1. Open the Dust Canister

Switch OFF, remove the key and disconnect the battery. Release the lid clips and lift off the clear lid. Avoid releasing dust into the work area.



2. Empty and Inspect the Bag

Empty the reusable bag after each shift. Brush-clean dry; do not wash it. Replace a disposable liner rather than emptying it. Check bag, filter, seal and hose before refitting.

3. Access the Pad Safely

Isolate the battery. Lock the handle upright and, with suitable assistance, lower it carefully until the handle rests on the floor. Keep the machine stable; never work under an unsupported machine.

4. Replace the Pad

Release the central pad retainer as marked. Remove the old pad and clean the driver. Fit a suitable 525mm pad centrally and secure the retainer. Replace torn, worn or delaminating pads.

5. Return to the Working Position

Carefully raise the machine, check the pad and skirt sit evenly, and set the handle height. Reconnect the battery only after all parts are secure.

MAINTENANCE & STORAGE

DO NOT HOSE, PRESSURE-WASH OR IMMERSE THE MACHINE, BATTERY OR CHARGER. SERVICE MUST BE PERFORMED BY AUTHORISED PERSONNEL.

After each use

- Switch off, remove the key and disconnect the battery before cleaning.
- Empty the dust bag, inspect the filter and hose, and refit all parts securely.
- Inspect the pad and underside of the deck. Remove residue without wetting the motor or electrical components.
- Wipe the machine with a soft damp cloth, then dry it. Recharge the battery.

Storage

- Store indoors on a level, dry surface away from heat, sunlight, moisture and unauthorised users. Remove the key.
- For extended storage, fully charge the battery first and check/recharge it periodically. Do not store with a flat battery.
- Do not leave the machine resting on a damp, dirty or compressed pad for long periods.

Authorised service

Stop using the machine if it vibrates excessively, emits unusual noise or odour, repeatedly trips protection, has damaged wiring, or cannot be controlled safely. Do not open the battery, charger, motor or control housing. Contact Godfreys Commercial or an authorised Service Agent.

MAINTENANCE SCHEDULE

Regular inspection and cleaning help maintain finish quality, runtime and safe operation.

Frequency	Task
Before each use	Inspect pad condition, centring and security.
Before each use	Check dust bag, filter, lid seal and hose.
Before each use	Check battery level, connector and cable.
Before each use	Check guards, controls, handle lock and fasteners.
After each use	Empty the dust bag and inspect the filter.
After each use	Clean/turn the pad or replace if worn.
After each use	Wipe exterior surfaces and underside of deck.
After each use	Recharge the battery.
Weekly	Clean vents and remove debris from wheels.
Weekly	Inspect hose and dust path for blockage or damage.
Monthly	Inspect handle, safety controls and pad-pressure control.
Monthly	Inspect battery connector and charger condition.
As required	Replace pad, dust bag/filter or worn components.

NOTES

Conditions of warranty



Your Origin Vitesse 1800B Floor Burnisher has 2 years warranty on the body and motor, against product defects and failures when the product is used in accordance with the terms and conditions of this warranty statement.

This warranty is provided by Future Innovation Holdings Pty

Ltd Trading as Godfreys Commercial ABN 98 677 632 021. This warranty commences from the original date of purchase and is not transferable. You are required to retain your original proof of purchase for any claims under this warranty. This warranty is valid only in the country where the floor burnisher is purchased.

Your Origin Vitesse 1800B Floor Burnisher must be operated in accordance with these instructions and used only for its intended purpose as described in this instruction manual. This machine is designed for dry, high-speed burnishing of suitable finished hard floors only.

Your Origin Vitesse 1800B Floor Burnisher is not designed for wet operation, liquid collection, floor stripping or sanding, or use on unfinished, damaged, wet or contaminated floors. Do not use it near combustible materials, hazardous substances or flammable vapours. Misuse or use outside the instructions in this manual may cause damage and will void this warranty.

Accessories and consumables including burnishing pads, dust bags and filters, unless defective in manufacture, are not subject to this warranty. Battery and charger coverage, where applicable, is subject to their stated warranty conditions. Regular care and maintenance is recommended.

Refer to the instruction manual for further information regarding the use and care of your Origin Vitesse 1800B Floor Burnisher, as misuse or failure to follow the instructions may void this warranty.

In the event of service or advice being needed, or if you would like to make a claim under this warranty, please immediately stop using the Origin Vitesse 1800B Floor Burnisher and contact Godfreys Commercial, 2 Drake Boulevard, Altona, VIC 3018, on 131 929, Monday-Friday 9am-5pm AEST, or email commercialsupport@godfreys.com.au.

The decision to repair or replace the floor burnisher is at the discretion of Godfreys Commercial, depending on the circumstances and requirements of any applicable law. If Godfreys Commercial decides to repair or replace your Origin Vitesse 1800B Floor Burnisher, it will do so at its own cost. Any transportation costs involved in a claim under this warranty shall be borne by the claimant.

Godfreys Commercial is unable to accept responsibility under this warranty for any repair work not carried out by an authorised Service Agent, or any defect arising from or in connection with the use of non-genuine parts. If any part is no longer available or manufactured, Godfreys Commercial will replace it with a genuine functional replacement part.

This warranty does not apply to the cost of replacing any parts of the Origin Vitesse 1800B Floor Burnisher due to normal wear and tear, alterations, improper installation, physical abuse, misuse, lack of maintenance, or accidental damage.

If proof of purchase cannot be provided at the time of a warranty claim or service, any work carried out on the Origin Vitesse 1800B Floor Burnisher will be at the claimant's cost.

The repair of the Origin Vitesse 1800B Floor Burnisher under this warranty does not extend the original warranty period. If the product is replaced under this warranty, the replacement will be covered for the remainder of the original warranty period. However, you may still have statutory rights after this time.

The benefits conferred by this warranty are in addition to all other rights and remedies in respect of the product as outlined under the Competition and Consumer Act 2010 (Cth) and other State and Territory laws.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Origin.

Future Innovation Holdings Pty. Ltd. trading as Godfreys Commercial

ABN: 98 677 632 021

2 Drake Boulevard Altona, Victoria 3018

Customer Support:

131 929

www.godfreys.com.au

commercialsupport@godfreys.com.au

Origin® is a registered trademark.