



QUALITY CLEANING SOLUTIONS



IDEAL FOR:

- Shops
- Schools
- Offices
- Motels & Hotels
- Restaurants & Cafes

5L DRY VACUUM

900W (1300W WITH POWER BRUSH SOCKET)

AS5 Evolution



IMPORTANT

Always switch off the cleaner and remove the plug from the electricity power supply before cleaning your appliance, when not in use or attempting any maintenance task. The cleaner must only be connected to an AC power supply at the voltage shown on the rating label. This cleaner should only be used for its intended purpose as described in this instruction manual. **Never operate the vacuum cleaner without filters and dust bag.**

SAFETY PRECAUTIONS AND WARNING:

WHEN USING YOUR VACUUM CLEANER, BASIC PRECAUTIONS SHOULD ALWAYS BE OBSERVED, INCLUDING THE FOLLOWING;

1. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
2. Children should be supervised to ensure that they do not play with the appliance.
3. To prevent electrical shock, do not immerse the appliance, power cord or power plug into water or other liquids.
4. To prevent electrical shock, do not use the vacuum cleaner outdoors or on wet surfaces.
5. Always check the power cord before use, the power cord and the plug should be in a good condition and must not be damaged. If the power supply cord is damaged or defective, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
6. Do not unplug by pulling on the power cord. To unplug, grasp the plug not the power cord. Use only Australian and New Zealand electrical safety approved extension cords.
7. Do not pull or carry the appliance by the power cable, use the power cable as a handle or pull the power cable around shaft edges or corners. Avoid running the appliance over the power cable.
8. Ensure the appliance is switched off before unplugging.
9. Do not handle or operate the appliance with wet hands and follow electrical safety precautions at all times.
10. Extreme caution should be exercised when using the appliance on stairs.
11. Do not attempt to change the attachments while the appliance is plugged in to mains power supply. Switch off and remove plug from mains power supply. Use only manufacturer's recommended accessories.
12. Do not operate the vacuum cleaner too close to the heaters, radiators and other hot surfaces.
13. Do not use the appliance to pick up flammable items or combustible liquids (i.e. gasoline, hot ashes cigarettes, matches, explosive materials or anything burning) or use in areas where such substances and items may be present.
14. Do not use the appliance to pick up toxic materials (i.e. chlorine bleach, ammonia).
15. Ensure the appliance is disconnected from the main power supply before connecting the hose to the unit.
16. Do not operate or use the appliance without dust bag and filters in place.
17. Before vacuuming, remove any large or sharp objects from the floor or cleaning surface in order to prevent damage to the filter.

18. If the hose inlet, floor tool or the chrome tube is blocked, switch off the cleaner straight away and remove from the main power. First clear the blocked object before attempting to start the cleaner vacuum again.
19. Do not leave the appliance unattended when it is connected to a mains power supply.
20. Before carrying out any maintenance service or cleaning the filters, always switch off the vacuum cleaner and disconnect the plug from power supply.
21. Keep ends of the hose, chrome tube and other openings away from your face and body.
22. Do not use the vacuum cleaner if it is damaged or breaks down. Check the electrical cable regularly for defects. If connection cables or electrical contacts damaged, have them replaced immediately.
23. Never clean the vacuum cleaner or any of the electrical parts, especially the electrical connections with water or liquid cleaners.
24. Never attempt to make any modifications electrically to the vacuum cleaner.
25. Always store the appliance indoors in a cool and dry place.
26. Do not pickup water, dry use only.
27. Damage caused by improper use or by not observing the instructions in this manual will void warranty.
28. Indoor and domestic use only.

BEFORE YOU BEGIN



1. **Do not** operate the vacuum cleaner too close to heaters, radiators, and other hot surfaces.



2. Before inserting the plug into the wall, make sure your hand is dry.



3. Before turning on the vacuum cleaner, remove any large or sharp objects from the floor or cleaning surface in order to prevent damage to the filter.



4. When you want to pull the plug from the wall, **do not** use the power cable, gently pull the plug from the power socket.
5. If the hose inlet or chrome tube are blocked, you should switch off the cleaner straight away and remove from mains power. First clear the blocked substance before attempting to start the vacuum cleaner again.

This machine is equipped with a cord and plug. In the event that either of these parts get damaged, it must be repaired by a qualified technician.

KNOW YOUR PRODUCT

1. 2pc Tubes
2. Hose
3. Carry Handle
4. Connection Latches
5. On/Off Switch
6. Power Brush Socket
7. Canister
8. Hose Inlet
9. Floor Tool
10. Wheel
11. Power Cord (not shown)
12. Crevice Tool
13. Dusting Brush
14. Upholstery Tool
15. Dust Bag (2pc)
16. Cloth Filter

Technical Information

Model: AS5

240V ~ 50HZ

Pmax: 900W

Pmax 1300W with
power brush socket




ASSEMBLY (WITH HOSE)



1. Connect the handle to the first tube.



2. Connect the first tube to the second tube.

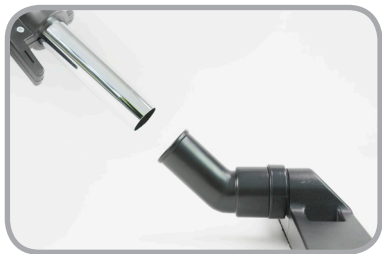

3. Connect the tube to the desired cleaning accessory.



ASSEMBLY (WITH HOSE)



4. Insert the hose end into the hose inlet. Turn clockwise to lock the hose in place.



5. Once assembled as per diagram, start the cleaner by pressing the On/Off switch.



6. If using a Power Brush, always switch off the cleaner and remove the plug from the electricity power supply before connecting power brush to the socket.

Warning! The maximum power for the power brush to be connected to the cleaner is 400W.

ASSEMBLY



Variable Suction Control

Slide the regulator on handle to adjust the suction power.

ACCESSORIES



The floor tool is ideal for cleaning on carpets and hard floors.



Fitting the Accessories

To fit the accessories to the tube, gently insert the tube into the top of the crevice tool, dusting brush and upholstery tool.

Crevice Tool – Eliminate dust from hard to reach places like radiators, crevices, corners, baseboards or between cushions with this easy to use crevice tool.



Dusting Brush – Ideal for cleaning blinds, bookshelves and lampshades.



Upholstery Nozzle – For Vacuuming furniture and upholstery.

Note: For best performance adjust the suction power on the handle.



OPERATION

Dry Vacuum Cleaning

1. Ensure the filter is always fitted before the cleaner is used.
2. This cleaner should be used with a dust bag.
3. Please ensure dust bag is fitted properly before use.
4. Once the dust bag is full we recommend a new dust bag be fitted.

MAINTENANCE

WARNING! ENSURE THE CLEANER IS NOT CONNECTED TO THE POWER SUPPLY WHEN PERFORMING ANY MAINTENANCE PROCEDURES.

NOTE: ONLY USE THE DUST BAG SUPPLIED OR RECOMMEND BY THE MANUFACTURER TO AVOID CAUSING DAMAGE TO THE MACHINE AND VOIDING THE WARRANTY.



Dust Bag Cleaning and Replacing

1. Lift the latches on both sides.

MAINTENANCE (CONTINUED)



2. Open the top cover.



3. Take out the cloth filter.



4. To stop dust and debris from escaping the dust bag when removing the dust bag from the machine, firmly hold the dust bag in the dust bag holder and gently pull the dust bag seal.
5. Remove the dust bag when it is full and replace with a new dust bag.



6. Replacing optional HEPA filter.

SPECIFICATIONS

Max Power: 900W (1300W with power brush socket)

Capacity: 5L

Filtration: Polyester

Tube: 2pc

Hose Length: 2.5m

Power Cable Length: 10m

Net Weight: 6.6kg

TROUBLESHOOTING

TROUBLE	POSSIBLE CAUSE	REMEDY
Suction weakens or cleaner runs hot	Clogged filter	Brush dirt from filter. If condition continues, change filter.
	Air leak	Check all fittings for tight fit (floor tool, hoses, etc.). Check that tank cover is sealed properly.
	Obstruction in hose or floor tool	Check floor tool, hose, etc. for obstructions, and remove if present.

CUSTOMER CARE

For customer service or product enquiries please contact **AU** 1800 815 270 **NZ** 0800 282 288

PRODUCT NUMBER	PRODUCT DESCRIPTION
31220315	Hose Assembly
31120005	Crevice Tool
33100827	Cloth Filter
32440446	Dust Bag 10pk
33500114	Castor Wheel
33500117	Rear Wheel Assembly Set
31300281	2pc Tubes
32200493	HEPA Filter (Optional)

Conditions of warranty



Your Pullman cleaner has a one year parts and labour warranty against product defects and failures when the product is used in accordance with the terms and conditions of this warranty statement.

The cleaner must be operated in accordance with these instructions. This cleaner is not designed for the collection of vitreous building material including particle board, construction products and similar products such as wood/fibres, cement, fillers, fibre glass etc or excessive or frequent sand. The infrequent pick-up of these materials in these circumstances may be harmful to your cleaner and may void the manufacturer's warranty.

Accessories and consumables including dust bags and filters, unless defective in manufacture, are not subject to this warranty. In order to prolong the life of accessories and consumables, regular care and maintenance is recommended.

When properly used and cared for, your cleaner will render excellent service; refer to the instruction manual for further details, as misuse or failure to follow the instructions makes this warranty void. In the event of service or advice being needed, please contact Electrical Home-Aids Pty Ltd, ABN 62 007 539 577, Ground Level, Building 3 Brandon Business Park, 530 Springvale Rd, Glen Waverley, VIC 3150. Customer Care: 1800 815 270.

The decision to repair or replace the cleaner is at the sole discretion of Electrical Home-Aids Pty Ltd. If Electrical Home-Aids Pty Ltd decide to repair or

replace the cleaner, it will do so at its own cost.

Electrical Home-Aids Pty Ltd is unable to accept responsibility under this warranty for any repair work not carried out by an authorised International Cleaning Solutions Service Agent or from the use of non-genuine parts. If any part is no longer available or manufactured, Electrical Home-Aids Pty Ltd will replace it with a genuine functional replacement part. This warranty does not apply to the cost of replacing any parts of the product due to normal wear and tear, alterations, improper installation, physical abuse, misuse or accidental damage. Any transportation costs involved in the repair of defective parts shall be borne by the claimant.

If proof of purchase cannot be provided at the time of a warranty claim or service, any work carried out on the cleaner is chargeable. The repair or replacement of the cleaner under this warranty does not extend the original period of warranty.

The benefits conferred by this warranty are in addition to all other rights and remedies in respect of the product as outlined under the Competition and Consumer Act and other State and Territory laws.

"Our goods come with guarantees that cannot be excluded in the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure."



Electrical Home-Aids Pty. Ltd.

ABN 62 007 539 577

Ground Level, Building 3, Brandon Business Park
530 Springvale Road, Glen Waverley, Victoria 3150

Pullman is a registered trademark.

Contact International Cleaning Solutions Pty. Ltd. for your
nearest authorised service centre on
AU 1800 815 270 NZ 0800 282 288.

customerservice@godfreys.com.au