




ULTRA PERFORMER

2 in 1 CORDLESS STICK


ultra performer
Superior Pickup
Ultra Lightweight
Lithium Performance

ultra performer

HOOVER

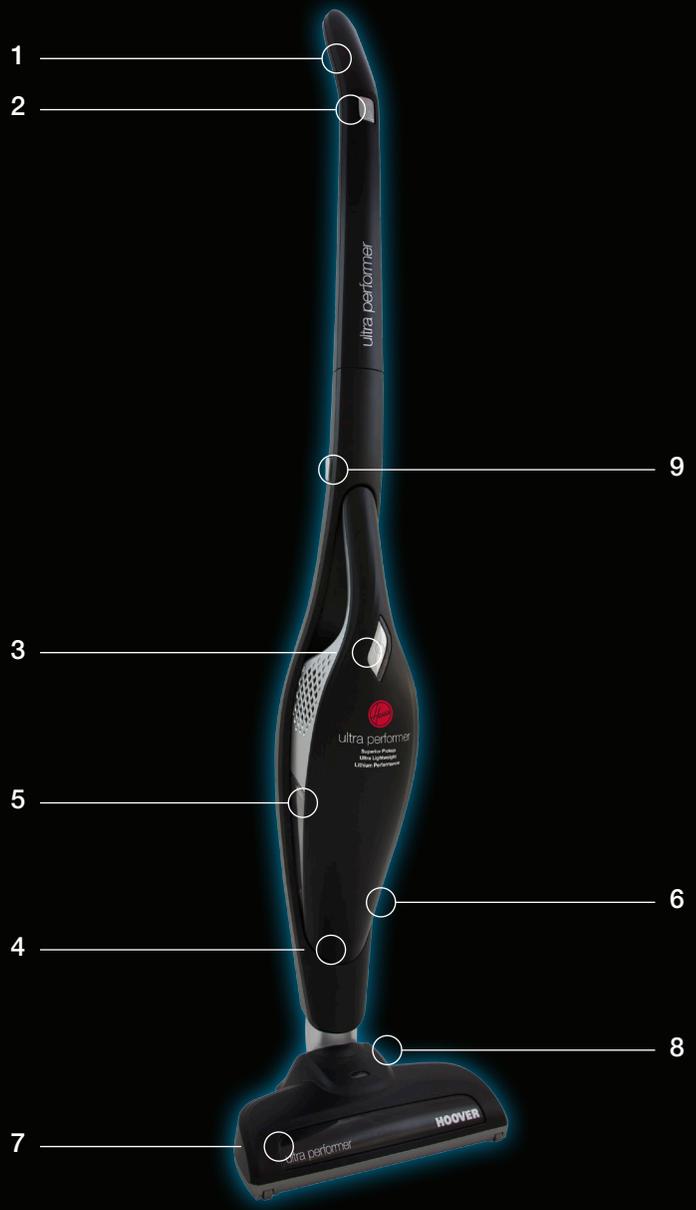

ZL1306 Ultra Performer

Congratulations on the purchase of your new HOOVER vacuum cleaner. There are many useful features built into your cleaner and we recommend that you carefully read this instruction manual so that you may take best advantage of them.

Features:

1. Handle
2. On/off Button & Variable Suction Control Button
3. Power Indicator Display; Handvac On/off Button & Variable Suction Control Button
4. Canister Release Button (not shown)
5. Dust Canister
6. Max Fill Line (not shown)
7. Motorised Power Head
8. Wheels (not shown)
9. Handvac Release Button
10. Charging Base (not shown)
11. Charger / Adaptor (not shown)

Specifications:

Voltage: 22.2V

Power: 130W

Dust capacity: 350 ml

Noise level: 78.6 dBA

Net weight: 2.45kg

***Please contact Hoover Customer Care 1300 360 845,
NZ (09) 263 7573 to find your local spare parts provider.***

Before You Begin

This cleaner must be operated in accordance with these instructions and used only for domestic household cleaning to remove DRY dirt and dust from household carpets, flooring, walls and fabrics. This cleaner is not fit to be used as an industrial cleaner hence will void the manufacturer's warranty if used inappropriately.

Please read these instructions thoroughly

This will ensure you obtain full benefit from your new cleaner. Keep this Instruction Manual in a handy place for future reference.

Important

Always switch the cleaner off and remove the plug from the electricity supply before cleaning your appliance, when not in use, or attempting any maintenance task. The charging base must only be connected to an AC supply at the voltage shown on the rating label. This cleaner should only be used for its intended purpose as described in these instructions.

Precautionary measures:



1. **Do not** operate the vacuum cleaner too close to heaters, radiators, and other hot surfaces.



2. Before inserting the plug into the wall, make sure your hand is dry.



3. Before turning on the vacuum cleaner, remove any large or sharp objects from the floor or cleaning surface in order to prevent damage to the filter.



4. When you want to pull the plug from the wall, **do not** use the power cable, gently pull the plug from the power socket.



Safety Precautions & Warnings

IMPORTANT! Always switch off the appliance before cleaning, when not in use or attempting any maintenance task.

The charger must only be connected to an AC power supply at the voltage shown on the rating label. This cleaner should only be used for its intended purpose as described in this instruction manual. Never operate the vacuum cleaner without filters.

Read the manual attentively before using the appliance for the first time.

When using your vacuum cleaner, basic precautions should always be observed, including the following:

1. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
2. Children should be supervised to ensure that they **do not** play with the appliance.
3. To prevent electrical shock, **do not** immerse the appliance, battery, or power plug into water or other liquids.
4. To prevent electrical shock, **do not** use the vacuum cleaner outdoors or on wet surfaces.
5. Always check the power cord before use, the power cord and the plug should be in a good condition and **must not** be damaged. If the power supply cord is damaged or defective, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
6. The appliance and charging base are intended for domestic indoors use only.
7. **Do not** unplug by pulling on the power cord. To unplug, grasp the plug, not the power cord.
8. Use only Australian and New Zealand electrical safety approved extension cords. **Do not** pull or carry the appliance by the power cable, use the power cable as a handle or pull the power cable around sharp edges or corners. Avoid running the appliance over the power cable.
9. **Do not** handle or operate the appliance with wet hands and follow electrical safety precautions at all times.
10. Extreme caution should be exercised when using the appliance on stairs.
11. **Do not** attempt to change the attachments while the appliance is switched on. Use only manufacturer's recommended accessories.
12. **Do not** operate the vacuum cleaner too close to heaters, radiators and other hot surfaces.
13. **Do not** use the appliance to pick up flammable items or combustible liquids (i.e. gasoline, hot ashes cigarettes, matches, explosive materials or anything burning) or use in areas where such substances and items may be present.
14. **Do not** use the appliance to pick up toxic materials (i.e. chlorine bleach, ammonia).
15. **Never** operate or use the appliance without the filters in place.

16. Before vacuuming, remove any large or sharp objects from the floor or cleaning surface in order to prevent damage to the filter.
17. If the air inlet or floor head is blocked, switch off the cleaner straight away. First, clear the blocked object before attempting to start the vacuum cleaner again.
18. Before carrying out any maintenance service or cleaning the filters, always switch off the vacuum cleaner.
19. Keep openings away from your face and body.
20. **Do not** use the vacuum cleaner if it is damaged or broken. Check the electrical regularly for defects. If connection cables are damaged, have them replaced immediately.
21. **Never** clean the vacuum cleaner or any of the electrical parts, especially the electrical connections with water or liquid cleaners.
22. **Never** attempt to make any modifications electrically to the vacuum cleaner and charging base.
23. Always store the appliance and charger indoors in a cool and dry place.
24. **Do not** pick up water, for dry household use only
25. Use the electric power head only for vacuuming dust and dry substances in the home.
26. **Never** run over the power cable with the power head as the cable could get damaged.
27. **Never** touch the roller brush while the vacuum cleaner is switched on.
28. To prevent unnecessary wear on the power head cleaning nozzle, keep it moving while in operation.
29. Damage caused by improper use or by not observing the instructions in this manual will void warranty.

Battery use and care

1. The battery can only be replaced by a qualified technician. **Do not** try to open the cleaner to replace the battery. Failure to do so may cause risk of injury and fire.
2. The appliance is only to be used with the charging base uniquely provided with the appliance.
3. Only charge the battery inside the product and only use the specifically designated charger to charge the product.
4. When handvac is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects that can make a connection from one terminal to another. Shorting the handvac terminals together may cause burns or a fire.
5. Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.
6. **Do not** charge or store the cleaner outdoors or inside the car. Only charge or store the battery in a dry indoor area where the temperature is more than 5°C but less than 45°C.
7. **Never** attempt to open the battery for any reason. If the plastic housing of the cleaner breaks or cracks, immediately discontinue use and **do not** recharge.
8. The charging base is **not** a serviceable part.
9. Before disposal of your battery, fully discharge your battery by running the product until it stops.
10. The cleaner contains a Li-Ion battery. **Do not** dispose the cleaner with your local garbage. Contact your local council for the instruction of disposal of the battery.
11. **Do not** use the charger to charge a non-chargeable battery.



Assembly

WARNING! Always switch off the cleaner before fitting or removing accessories.

Assembly of powerhead



1. During connection, please place the powerhead on the floor and insert into the main body of the unit, in the direction shown in figure 1.



2. Insert the handle into the main body assembly. once connected insert the screw provided to firmly secure the two together.



3. Insert the handvac air inlet to the fixed hole of the main body then push the handle into place. It will click into place.

Accessories



Carpet



Hard Floors

Motorised Power Head

Ideal for cleaning on carpets and hard floors.

Note: The motorised power head might be difficult to move on some carpet, adjust suction by pressing the variable suction control button to reduce the suction.



Crevice Tool

For radiators, crevices, corners, baseboards and between cushions.



2 in 1 Dusting Brush & Upholstery Tool

For vacuuming furniture and upholstery.



Instructions for Use

Charging of vacuum cleaner



1. Please promptly charge the vacuum cleaner when it is experiencing a power shortage. Plug the charging adaptor into the charging base socket then place the cleaner on the charging base.
2. When the voltage falls below the required level, the vacuum cleaner will automatically interrupt the power supply in order to protect the battery. You must then promptly charge it.
3. The power indicator will flash when the cleaner is being charged.
4. When the power indicator light turns off, the vacuum cleaner battery is fully charged.



Powerhead vacuuming

The ultra light is equipped with a power head for deep cleaning of carpets and will automatically switch on when you turn the appliance on.

To avoid damage to the carpet it is recommend to never allow the vacuum to be in a stationary position while the power head is on.

NOTE:

1. *During the first three applications of use, twelve hours of continuous charging shall be ensured every time. After complete charging and discharging, the vacuum cleaner can be charged for use in normal charging mode of about 8 hours.*
2. *This vacuum cleaner comes with a halt in charging function. When the vacuum cleaner is being charged, the vacuum cleaner cannot be enabled even though the switch button is pressed down.*

Instructions for Use (continued)



Using the Handvac

1. Remove the hand vac from the stick vac by pressing the handvac release buttons on both sides.
2. Press the power button on the handvac once for maximum power and twice for minimum power.
3. The handvac is ideal for vacuuming easy to reach areas that the stickvac cant such as curtains or benchtops.



Maintenance



Cleaning of canister and filters

IMPORTANT! Switch off the vacuum cleaner before performing any maintenance duties.

1. Remove the hand vac from the stick vac by pressing the handvac release buttons on both sides.



2. Once the hand vac is removed from the unit, press the release button on the canister body to remove the dust canister.

Note: To install the dust canister, ensure it is seated inside the housing before gently pushing into place to lock the clip. **DO NOT** apply excessive force to lock the canister into the housing, this may damage the clips.

Maintenance (continued)



3. Remove the cover of the dust bin by picking up the rubber seal of the dust bin filter. The dust bin filter can be cleaned under lukewarm water. Air dry it for 24 hours before replace it to the dust bin. It is recommended to replace the filter every 6 months to maintain the filtration and cleaning performance of the cleaner.



4. To clean the mesh filter turn it in an anti clockwise direction until the arrow is aligned with the unlock symbol. then lift it up. You can clean the mesh filter by beating it gently against the edge of dust bin. If the mesh filter is very dirty you can rinse under luke warm water.



5. Pull out the cyclone separator.
6. You can place canister over dust bin and shake for the dirt to fall out.





IMPORTANT:

*Please ensure this side of the dust filter faced up.
Please ensure the cyclone separate is fully inserted.*

Note: Filter should be air dried in a ventilated place for 24 hours before use.



Cleaning of powerhead

1. Pull the arrow button in an outward direction as shown in the image.



2. Remove the brush roll from the cover in the direction shown for cleaning (do not wash with water).

3. After cleaning or replacement, assemble it in the reverse order of disassembly.



Note:

The roller brush has a Hair Cutting Line feature. Hair can be cut and removed along the cutting line.

Spare Parts

Part	Part Number
Charging Adaptor	33201243
Handvac	14120102
Filter Set	32201252
Agitator Roller Brush	33788008
Dust Bin Assembly	33155101
Powerhead Assembly	11400156

Please contact Hoover Customer Care: 1300 360 845, NZ: (09) 263 7573 to find your local spare parts provider.



Troubleshooting

Problems and solutions

If you come across a problem, please use the checklist of troubleshooting tips before contacting Hoover Customer Care.

Fault	Cause	Solution
Cleaner will not switch on / Power indicator flash	Flat battery	Place the cleaner into the charging base
The cleaner can't be charged	The cleaner is not placed properly in the charging base The charging base disconnects from the mains power supply	Replace the cleaner into the charging base Unplug and plug the wall adaptor to different power socket Reconnect the wall adaptor to the charging base (The charging base is not serviceable part).
Reduced suction	Dust bin filter is not installed Dust bin is full of dust Dust bin filter filled with dust	Reinstall the filter Empty the dust bin Clean or replace the filter.
Dust bin can't be reinstalled	The cyclone filter and the dust bin filter is not installed properly	Reinstall the cyclone filter and the dust bin filter as per the instruction
Roller brush does not spin	The roller brush is blocked	Take out the roller brush from the power head and remove any hair from the roller brush



ULTRA PERFORMER

Conditions of warranty

Your Hoover cleaner, in the case of domestic use, has a one year parts and labour warranty against product defects and failures when the product is used in accordance with the terms and conditions of this warranty statement.

This warranty commences from the original date of purchase and is not transferable; please retain your original proof of purchase for any warranty claims. This warranty is valid only in the country where the cleaner is purchased.

The cleaner must be operated in accordance with these instructions and used only for domestic household cleaning to remove DRY dirt and dust from household carpets, flooring and fabrics. This cleaner is not fit to be used as an industrial cleaner, and is not designed for the collection of vitreous building material including particle board, construction products and similar products such as wood/fibres, cement, fillers, fibre glass etc or excessive or frequent sand. The infrequent pick-up of these materials in these circumstances may be harmful to your cleaner and may void the manufacturer's warranty.

Accessories and consumables including dust bags and filters, unless defective in manufacture, are not subject to this warranty. In order to prolong the life of accessories and consumables, regular care and maintenance is recommended.

When properly used and cared for, your cleaner will render excellent service; refer to the instruction manual for further details, as misuse or failure to follow the instructions makes this warranty void.

In the event of service or advice being needed, please contact Electrical Home-Aids Pty Ltd, Level 1, Building 2 Brandon Business Park, 530 Springvale Road, Glen Waverley Victoria 3150, or on 1300 360 845, Monday-Friday 9am-5pm EST. The decision to repair or replace the cleaner is at the sole discretion of Electrical Home-Aids Pty Ltd. If Electrical Home-Aids Pty Ltd decide to repair or replace the cleaner, it will do so at its own cost.

Electrical Home-Aids Pty Ltd is unable to accept responsibility under this warranty for any repair work not carried out by an authorised Hoover Service Agent or from the use of non-genuine parts. If any part is no longer available or manufactured, Electrical Home-Aids Pty Ltd will replace it with a genuine functional replacement part. This warranty does not apply to the cost of replacing any parts of the product due to normal wear and tear, alterations, improper installation, physical abuse, misuse or accidental damage. Any transportation costs involved in the repair of defective parts shall be borne by the claimant.

If proof of purchase cannot be provided at the time of a warranty claim or service, any work carried out on the cleaner is chargeable.

The repair or replacement of the cleaner under this warranty does not extend the original period of warranty.

The benefits conferred by this warranty are in addition to all other rights and remedies in respect of the product as outlined under the Competition and Consumer Act and other State and Territory laws.

"Our goods come with guarantees that cannot be excluded in the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure."



Call Hoover Customer Care with any product queries

Australia **1300 360 845**
New Zealand **(09) 263 7573**

To find out more about our range,

visit: www.hoover.com.au
www.hoover.co.nz

email: sales@hooverfloorcare.com.au

SAVE TIME, REGISTER WARRANTY ONLINE!

www.hoover.com.au and www.hoover.co.nz