


iVac

Animal S50 Stick Vacuum

2-in-1 versatility
Ideal for homes with pets
Runtime up to 60 minutes



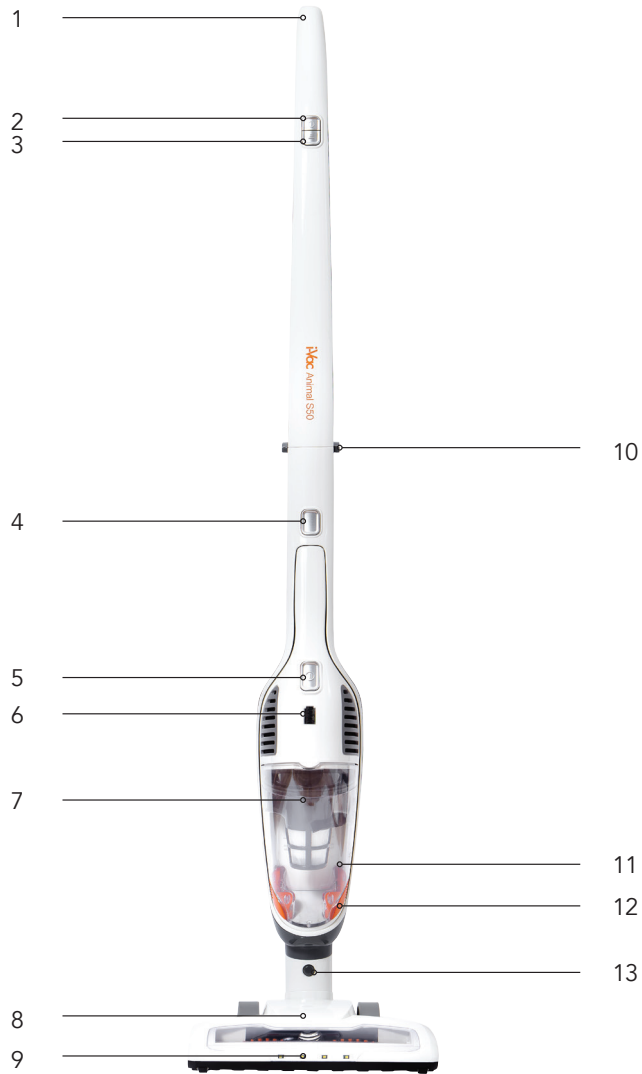

S50 Stick Vacuum

Congratulations on the purchase of your new i-Vac Stick Vacuum. There are many useful features built into your cleaner and we recommend that you carefully read this instruction manual to take the best advantage of these features.

Features:

1. Handle
2. On/off button
3. Variable suction control button
4. Hand vacuum release button
5. Hand vacuum on/off button
6. Battery power indicator
7. Dust bin
8. Motorised power head
9. LED lights
10. Handle lock
11. Max fill line
12. Dust bin release buttons
13. Power head release button

Accessories:

14. Crevice tool
15. Dusting brush

Specifications:

Voltage: 21.6V

Dust capacity: 250ml

Run time: Maximum 60 minutes*

Noise level: 76 dBA

Net weight: 2.34kg

Power: 125W

Charger: JOD-S-270050AU

* Applies to low mode with crevice tool.

Please contact Godfreys Customer Service on 131 929 to find your local spare parts provider.

Before You Begin

This cleaner must be operated in accordance with these instructions and used only for domestic household cleaning to remove DRY dirt and dust from household carpets, flooring, walls and fabrics. This cleaner is not fit to be used as an industrial cleaner and will void the manufacturer's warranty if used inappropriately.

Please read these instructions thoroughly

This will ensure you obtain full benefit from your new cleaner. Keep this instruction manual in a handy place for future reference.

Important

Always switch off the vacuum cleaner before cleaning, attempting any maintenance task, fitting or removing accessories, or when not in use. The charger must only be connected to an AC power supply at the voltage shown on the rating label. This cleaner should only be charged with the charger provided. This cleaner should only be used for its intended purpose as described in these instructions.

Precautionary measures:



1. Do not operate the vacuum cleaner too close to heaters, radiators or other hot surfaces.



2. Before inserting the plug into the wall, make sure your hands are dry.



3. Before turning on the vacuum cleaner, safely remove any large objects from the floor or cleaning surface in order to prevent damage to the filter.



4. When you want to remove the plug from the power socket, do not use the power cable, gently pull the plug from the power socket.



5. Do not use this vacuum cleaner to pick-up water or liquids.

Safety Precautions & Warnings

IMPORTANT! Always switch off the vacuum cleaner before cleaning, when not in use or before attempting any maintenance task. The charger must only be connected to an AC power supply at the voltage shown on the rating label. This cleaner should only be used for its intended purpose as described in this instruction manual. Never operate the vacuum cleaner without filters.

Read the manual attentively before using the vacuum cleaner for the first time.

When using your vacuum cleaner, basic precautions should always be observed, including the following;

1. This vacuum cleaner is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the vacuum cleaner by a person responsible for their safety.
2. Children should be supervised to ensure that they do not play with the vacuum cleaner.
3. To prevent electrical shock, do not immerse the vacuum cleaner, battery, or power plug into water or other liquids.
4. To prevent electrical shock, do not use the vacuum cleaner outdoors or on wet surfaces.
5. Always check the power cable before use, the power cable and the plug should be in a good condition and must not be damaged. If the power cable is damaged or defective, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
6. The vacuum cleaner and charging base are intended for domestic indoors use only.
7. Do not unplug by pulling on the power cable. To unplug, grasp the plug, not the power cable. Use only Australian and New Zealand electrical safety approved extension cords.
8. Do not pull or carry the vacuum cleaner by the power cable, use the power cable as a handle or pull the power cable around sharp edges or corners. Avoid running the vacuum cleaner over the power cable.
9. Do not handle or operate the vacuum cleaner with wet hands and follow electrical safety precautions at all times.
10. Extreme caution should be exercised when using the vacuum cleaner on stairs.
11. Do not attempt to change the attachments while the vacuum cleaner is switched on. Use only manufacturer's recommended accessories.
12. Do not operate the vacuum cleaner too close to heaters, radiators and other hot surfaces.
13. Do not use the vacuum cleaner to pick up flammable items or combustible liquids (i.e. gasoline, hot ashes, cigarettes, matches, explosive materials or anything burning) or use in areas where such substances and items may be present.

14. Do not use the vacuum cleaner to pick up toxic materials (i.e. chlorine bleach, ammonia).
 15. Never operate or use the vacuum cleaner without the filters in place.
 16. Before vacuuming, remove any large or sharp objects from the floor or cleaning surface in order to prevent damage to the filter.
 17. If the air inlet or floor head is blocked, switch off the vacuum cleaner straight away. Clear the blocked object before attempting to start the vacuum cleaner again.
 18. Before carrying out any maintenance service or cleaning the filters, always switch off the vacuum cleaner.
 19. Keep openings away from your face and body.
 20. Do not use the vacuum cleaner if it is damaged or broken. Check the electrical connections regularly for defects. If connection cables are damaged, have them replaced immediately.
 21. Never clean the vacuum cleaner or any of the electrical parts, especially the electrical connections, with water or liquid cleaners.
 22. Never attempt to make any electrical modifications to the vacuum cleaner and charging base.
 23. Always store the vacuum cleaner and charger indoors in a cool and dry place.
 24. Do not pick up water, for dry household use only.
 25. Use the electric power head only for vacuuming dust and dry substances in the home.
 26. Never run over the power cable with the power head as the cable could get damaged.
 27. Never touch the roller brush while the vacuum cleaner is switched on.
 28. To prevent unnecessary wear on the power head cleaning nozzle, keep it moving while in operation.
 29. Damage caused by improper use or by not observing the instructions in this manual will void warranty.
1. The battery can only be replaced by a qualified technician. Do not try to open the vacuum cleaner to replace the battery. Failure to do so may cause risk of injury and fire.
 2. The vacuum cleaner is only to be used with the charging base provided with the vacuum cleaner.
 3. Only charge the battery inside the product and only use the specifically designated charger to charge the product.
 4. When the vacuum cleaner is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects that can make a connection from one terminal to another. Shorting the vacuum terminals together may cause burns or a fire.
 5. Failure to read and follow the below instructions may result in fire, personal injury and damage to property if charged or used improperly.
 6. Do not charge or store the vacuum cleaner outdoors or inside the car. Only charge or store the battery in a dry indoor area where the temperature is more than 5°C but less than 45°C.
 7. Never attempt to open the battery for any reason. If the plastic housing of the vacuum cleaner breaks or cracks, immediately discontinue use and do not recharge.
 8. The battery pack is not a serviceable part.
 9. Before disposal of your battery, fully discharge your battery by running the product until it stops.
 10. The vacuum cleaner contains a Li-Ion battery. Do not dispose of the vacuum cleaner with your local garbage. Contact your local council for instructions on how to safely dispose of the battery.
 11. Do not use the charger to charge a non-chargeable battery.

Assembly

WARNING! Always switch off the cleaner before fitting or removing accessories.



1. Place the power head on the floor and insert it into the main body of the cleaner, as shown.



2. Lift the handle upwards. You will hear a “click” sound when it locks into place. To fold the handle for storage, turn the handle lock to release and fold the handle.

Tools & Accessories



Carpet



Hard floors

Motorised power head

Ideal for cleaning on carpets and hard floors.

NOTE:

The motorised power head may be difficult to move on some carpet types. If this occurs, reduce the suction power by pressing the variable suction control button.



Crevice tool

For cleaning radiators, crevices, corners, baseboards and between cushions.



Dusting brush

For vacuuming furniture and upholstery.

Instructions for Use



Charging the vacuum cleaner

1. Plug the charging adaptor into the charging base socket, then place the cleaner onto the charging base.
2. When battery power is low, the vacuum cleaner will automatically interrupt the power supply in order to protect the battery. When this occurs, the vacuum cleaner battery requires charging.
3. When the battery power indicator light turns off, the vacuum cleaner battery is fully charged.



NOTE:

1. **This product takes 8 hours to charge. Before the first three uses of the vacuum cleaner, however, 12 hours of continuous charging is required.**
2. **As a safety precaution, the vacuum cleaner cannot be switched on while the battery is charging.**

Instructions for Use (continued)



Power head vacuuming

This cleaner is equipped with a power head for deep cleaning carpets. The power head will automatically switch on when the cleaner is switched on.

To avoid damaging carpets, it is recommended to never leave the vacuum cleaner in a stationary position while the power head is operational.



Using the hand vacuum

1. Remove the hand vacuum from the stick vacuum by pressing the hand vacuum release button.
2. Press the power button to turn the hand vacuum on.
3. The hand vacuum is ideal for vacuuming areas the stick vacuum cannot reach, such as curtains and countertops.

Maintenance



Cleaning of dust bin and filters

1. Remove the hand vacuum from the stick vacuum by pressing the hand vacuum release button.

IMPORTANT! Switch off the vacuum cleaner before performing any maintenance duties.



2. Once the hand vacuum is removed from the unit, press the dust bin release buttons to remove the dust bin.

NOTE:

1. To reinstall the dust bin, place it back inside the housing and gently push it into place to lock the clip.
2. Do not apply excessive force to lock the dust bin into the housing, as this may damage the clips.

Maintenance (continued)



3. To remove the filter, turn it anti-clockwise and gently lift it from the dust bin.
4. Once the filter has been removed, the dust bin can be emptied and cleaned under lukewarm water.

NOTE:

It is recommended to replace the filters every six months or when they become visibly dirty.





Cleaning of the power head

1. Press the power head lock to release the brush roll for cleaning.
2. Remove the brush roll from the power head.
3. Remove any tangled hair or debris from the brush roll by carefully cutting along the hair cutting line visible on the brush roll.
4. After cleaning or replacing the brush roll, reverse steps 1-3 to reassemble the power head.

Spare Parts

Part	Part Number
Agitator	33788192
Charger	33202081
Filter	32201291

Troubleshooting

Problems and Solutions

Please contact Godfreys Commercial Customer Support on 131 929 to find your local spare parts provider.

Fault	Cause	Solution
Cleaner will not switch on / battery power indicator is flashing	Flat battery	Place the cleaner into the charging base
The cleaner can't be charged	The cleaner is not placed properly in the charging base The charging base is not connected to the mains power supply	Replace the cleaner into the charging base Reconnect the charging adaptor to the charging base (the charging base is not a serviceable part) Plug the charging adaptor into a different power socket
Reduced suction	Dust bin filter is not installed Dust bin is full of dust Dust bin filter is filled with dust	Reinstall the filter Empty the dust bin Clean or replace the filter.
Dust bin can't be reinstalled	The cyclone filter and dust bin filter are not installed properly	Reinstall the cyclone filter and dust bin filter according to these instructions
Roller brush does not spin	The roller brush is blocked	Take out the roller brush from the power head and remove any hair from the roller brush



Animal S50 Stick Vacuum

Conditions of warranty

Your i-Vac Animal Stick Vacuum, in the case of domestic use, has a two years warranty against product defects and failures when the product is used in accordance with the terms and conditions of this warranty statement.

This warranty is provided by Future Innovation Holdings Pty Ltd Trading as Godfreys Commercial ABN 98 677 632 021. This warranty commences from the original date of purchase and is not transferable. You are required to retain your original proof of purchase for any claims under this warranty. This warranty is valid only in the country where the cleaner is purchased.

Your i-Vac Animal Stick Vacuum must be operated in accordance with these instructions and used only for domestic household cleaning to remove dry dirt and dust from household carpets, flooring and fabrics. Your i-Vac Animal Stick Vacuum is not fit to be used as an industrial cleaner, and is not designed for the collection of vitreous building material including particle board, construction products and similar products such as wood/ fibres, cement, fillers, fibre glass etc or excessive or frequent sand. The infrequent pick-up of these materials may be harmful to your cleaner and will void this warranty.

Accessories and consumables including dust bags and filters, unless defective in manufacture, are not subject to this warranty. In order to prolong the life of accessories and consumables, regular care and maintenance is recommended.

Refer to the instruction manual for further regarding the use and care of your i-Vac Animal Stick Vacuum, as misuse or failure to follow the instructions voids this warranty.

In the event of service or advice being needed, or if you would like to make a claim under this warranty, please immediately stop using the i-Vac Animal Stick Vacuum and contact Godfreys Commercial, 2 Drake Boulevard Altona, VIC 3018, or on 131 929, Monday-Friday 9am-5pm AEST or commercialsupport@godfreys.com.au.

The decision to repair or replace the cleaner is at the

discretion of Godfreys Commercial depending on the circumstances and requirements of any applicable law. If Godfreys Commercial decide to repair or replace your i-Vac Animal Stick Vacuum, it will do so at its own cost. Any transportation costs involved in a claim under this warranty shall be borne by the claimant.

Godfreys Commercial is unable to accept responsibility under this warranty for any repair work not carried out by an authorised Service Agent, or any defect arising from or in connection with the use of non-genuine parts. If any part is no longer available or manufactured, Godfreys Commercial will replace it with a genuine functional replacement part. This warranty does not apply to the cost of replacing any parts of the i-Vac Animal Stick Vacuum due to normal wear and tear, alterations, improper installation, physical abuse, misuse or accidental damage.

If proof of purchase cannot be provided at the time of a warranty claim or service, any work carried out on the i-Vac Animal Stick Vacuum will be at claimant's cost.

The repair of the i-Vac Animal Stick Vacuum under this warranty does not extend the original period of warranty. If your i-Vac Animal Stick Vacuum is replaced under this warranty, the replacement will be covered by this warranty for the remainder of the original warranty period. However, you may still have statutory rights after this time.

The benefits conferred by this warranty are in addition to all other rights and remedies in respect of the product as outlined under the Competition and Consumer Act 2010 (Cth) and other State and Territory laws.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

* Two year warranty on parts and labour excluding the battery which has a one year warranty.